



LD8

Installation and Operations Manual

AB-V-MA-00660_RevA2 22 May 2025





Contents

1 Introduction	4
1.1 General information	4
1.2 LD8 receiver	4
1.3 System requirements	4
1.4 Preamble	5
1.5 Veripos Support	5
1.6 Activating Veripos correction services	6
1.7 Terms and abbreviations	7
1.8 Document conventions	
1.9 LD8 Notices	
1.10 Disclaimer	13
1.11 Equipment care	
2 Hardware overview	
2.1 System overview	
2.2 Connectors, LEDs and I/O ports	
2.3 Interface panel connections	
3 LD8 installation	
3.1 LD8 schematic example	
3.2 Location guidelines	21
3.3 Mounting	
3.4 Ventilation requirements	
3.5 Antenna installation	
3.6 Coaxial cable installation	
4 Configuration and operation	
4.1 Introduction	
4.2 WebUI status	
4.3 LD8 password	
4.4 LD8 firmware	32
4.5 L-band configuration	
4.6 NTRIP configuration	
4.7 Activation and deactivation of Veripos services	37
4.8 Calculation configuration	
4.9 Ethernet configuration	41
4.10 Output configuration	44





4.11 Input configuration	
4.12 Rolling log	
4.13 Factory reset	51
4.14 Applying firmware updates	52
5 Reference information	
5.1 Technical specifications	
5.2 Cabling and connectors	
5.3 LD8 output sentences	
6 Contact information	
6.1 Veripos Support details	
7 Appendix	
7.1 Summary specification of antennas	81
7.2 Summary specification of cabling	
7.3 Configuration and settings log	
	04
7.4 L-band coverage map	





1 Introduction

1.1 General information

To assist with LD8 operation, it will help to have the following items available when consulting this document:

- LD8 and associated equipment shipped to the site.
- A PC or Laptop meeting the system requirements specified below
- The Delivery note provided within the shipment from Veripos.
- Veripos document Antenna and Coaxial Cable Installation.
- LD8 Quick Guides, available from https://veripos.com/support/technical-documents/ld8.
- LD8 FAQs, available from https://help.veripos.com.

1.2 LD8 receiver

The LD8 is a high precision system, built into a lightweight, compact and environmentally protected enclosure and designed to operate reliably in the most demanding of marine environments. Key system features:

- Supports decimetre-level multi-constellation positioning with Veripos APEX and Ultra PPP correction services
- Compatible with Veripos Quantum software
- EN60945 Marine Certified
- 555 channels, all constellations, multi-frequency tracking
- Simultaneously track up to three Veripos correction service satellites
- ALIGN® GNSS heading solution
- Supports RTK operations
- Multiple communication interfaces for easy installation
- WebUI configuration utility

1.3 System requirements

This release of LD8 requires a PC or laptop with Windows 7 or later installed, capable of running the latest version of Microsoft Edge, Mozilla Firefox or Google Chrome (see individual browser requirements for more information) and an Ethernet port.





1.4 Preamble

The purpose of this manual is to provide the information necessary to install and operate the LD8.

This manual includes the following sections:

- 1. Introduction Details the purpose of the manual, conventions and abbreviations.
- 2. Hardware overview Describes the LD8 interface panel and provides technical data.
- 3. LD8 installation Covers LD8 installation and provides antenna & cabling guidelines.
- 4. Configuration and operation Details system configuration and operations
- 5. Reference information Provides detailed technical specifications.
- 6. Contact information Contains contact information for Veripos Support.
- 7. Appendix Provides additional supplementary material.

1.5 Veripos Support

Veripos Support is a service provided as the first point of contact for all Veripos technical support and fault reports. It is available 24 hours a day, 365 days per year. Full contact details are available in the Contact information section.

For support cases, contact support.veripos@hexagon.com or raise a ticket at https://help.veripos.com. Either method will immediately notify Veripos Support, who will then assist.

Veripos Support will provide initial help and may, if necessary, escalate tickets to regional on-call engineers to provide more in-depth technical support.

To aid support, upon first contact, please provide the following:

- Details of the issue or question
- Vessel name
- Company name
- Telephone number
- Unit user code
- Veripos hardware type
- Veripos software type
- Operating area
- Is this issue holding up operations?
- Any other relevant information





1.6 Activating Veripos correction services

Veripos correction signals are provided on a subscription basis by Veripos.

Activation of the LD8 is necessary for the system to decode corrections and output a corrected position. Users may request activation of services from support.veripos@hexagon.com, who will send the activation signal to the unit via an L-band satellite.

reripos (

When not in use, some service agreements may allow for service deactivation.



NOTE

To use Veripos correction signals, a contract with Veripos **must** first be in place. Veripos refers to this as a Service Access License (SAL).

To avoid delays, users should record the SAL number associated with the Veripos equipment. Veripos Support is unable to activate any equipment unless an active SAL exists.





1.7 Terms and abbreviations

AC	Alternating Current
ALIGN	GNSS heading solution
APEX	Veripos high accuracy positioning solution
Baud	Unit of signal transmission rate
BEIDOU	Chinese commissioned GNSS
COM	Communication Port
dB	Decibel
EGM96	Earth Gravitational Model 1996
DHCP	Dynamic Host Configuration Protocol
DOP	Dilution of Precision
DP	Dynamic Positioning
DQI	Differential Quality Indicator
EU	European Union
GALILEO	European commissioned GNSS
GLONASS	GLObal NAvigation Satellite System - Russian commissioned GNSS
GNSS	Global Navigation Satellite System
GP	Global Positioning
GPS	Global Positioning System - United States commissioned GNSS
HDOP	Horizontal Dilution of Precision
Hz	Hertz
ID	Identification
INS	Inertial Navigation System
IMU	Inertial Measurement Unit
IP	Internet Protocol
IPv4	Internet Protocol version 4
LAN	Local Area Network
L-band	Signal transmitted to carry correction data to mobile users
LED	Light Emitting Diode
NMEA	National Marine Electronics Association
PDOP	Positional Dilution of Precision
PPP	Precise Point Positioning
PPS	Pulse Per Second
PRN	Pseudo Random Noise
PSN	Product Serial Number
PTP	Precision Time Protocol
PWR	Power
Quantum	LD8 compatible visualisation software
RAIM	Receiver Autonomous Integrity Monitoring
RS232	Recommended Standard 232

veripos 🔶





RS422	Recommended Standard 422
RJ45	A physical network interface standard used in telecommunications
RTCM	Radio Technical Commission for Maritime Services
RTK	Real-Time Kinematic
SAL	Service Access License
SD	Standard Deviation
SBAS	Satellite Based Augmentation System
SMA	SubMiniature version A
Standard	Veripos Single frequency DGNSS system
TCP	Transmission Control Protocol
UAL	User Accuracy Level
UI	User Interface
Ultra	Veripos high accuracy position solution
USB	Universal Serial Bus
UTC	Coordinated Universal Time
VDC	Volts Direct Current
VDOP	Vertical Dilution of Precision
VOSS	Veripos Online Support System
WAAS	Wide Area Augmentation System
WebUI	Web User Interface
WEEE	Waste Electrical and Electronic Equipment
Wi-Fi	IEEE 802.11 (wireless) standard



1.8 Document conventions

1.8.1 Typographical conventions

Italic or **bold** text is used to emphasize certain information. *Italic* is also used in cross-references to other parts of the document and to other documents.

Bold text is also used for indicators and touch screen "push-buttons" commands.

Blue text is used for hyperlinking to other sections within this document or to external documents or websites.

⁄eripos 🔶

Bold italic text is used when display screens are mentioned in text.

Monospace text is used for input/output strings to/from the device.

1.8.2 Special Notices



WARNING

A warning indicates the risk of bodily harm or serious damage to the hardware.



CAUTION

A caution indicates the risk of damaging the hardware or adversely impacting the operation of the system.

NOTE

A note contains important information to help you make better use of the system.





1.9 LD8 Notices

The following notices apply to the LD8:

1.9.1 Waste electrical and electronic equipment

The Waste Electrical and Electronic Equipment Directive (hereinafter referred to as the "WEEE directive") places an obligation on EU-based manufacturers, distributors, retailers and importers to takeback electronics products at the end of their useful life. A sister directive, RoHS (Restriction of Hazardous Substances) complements the WEEE directive by banning the presence of specific hazardous substances in the products at the design phase. The WEEE directive covers all VERIPOS products imported into the EU as of August 13, 2005. EU-based manufacturers, distributors, retailers and importers are obliged to finance the costs of recovery from municipal collection points, reuse, and recycling of specified percentages per the requirements contained in the WEEE Directive.

Instructions for disposal of WEEE by users in the European Union

Products which have the undernoted symbol located on either the product itself or its packaging indicates that the product must not be disposed of with other waste. Instead, it is the user's responsibility to dispose of the product by handing it over to a designated collection point for the recycling of WEEE. The symbol shown below is on the product or on its packaging, which indicates that this product must not be disposed of with other waste. Instead, it is the user's responsibility to dispose of their waste. Instead, it is the user's responsibility to dispose of their waste equipment by handing it over to a designated collection point for the recycling and electronic equipment.

The separate collection and recycling of your WEEE at the time of disposal will help to conserve natural resources and ensure that it is recycled in a manner that protects human health and the environment. For more information about recycling centres, please contact the local city office, the household waste disposal service or the product supplier.







1.9.2 FCC

This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) this device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

LD8 has been tested and found to comply with the radiated and conducted emission limits for a Class B digital device. The Class B limits are designed to provide reasonable protection against harmful interference in a residential installation.

The equipment listed generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Re-orient or relocate the LD8
- Increase the separation between the equipment and the LD8
- Connect the equipment to an outlet on a circuit different from that to which the LD8 is connected
- Consult Veripos for help



CAUTION

To maintain compliance with the limits of a Class B digital device, you must use shielded interface cables.



WARNING

The LD8 has been authorised for use in mobile applications. At least 20 cm (8 inches) of separation between the LD8 and the User must be maintained during normal operation.



WARNING

Changes or modifications to this equipment, not expressly approved by Veripos could void the user's authority to operate this equipment.

1.9.2.1 Wi-Fi

The LD8 contains a Wi-Fi radio with the following approval:

• FCC ID: UTU-01019715





1.9.3 European Union / United Kingdom (UK)

1.9.3.1 Radio Equipment Directive

Veripos declares that the LD8 including its Wi-Fi transceiver is in compliance with:

- 1. EU Directive 2014/53/EU
- 2. UK Regulations S.1. 2017/1206

The full text of either the UK or EU Declaration of Conformity may be obtained from Veripos upon request.

1.9.3.2 ROHS

The LD8 is in conformity with Directive 2011/65/EU of the European Parliament and of the council of 8 June 2011 on the restriction of the use of certain hazardous substances in electrical and electronic equipment.





1.10 Disclaimer

Hexagon Autonomous Solutions division proprietary data

This document and the information contained herein are the exclusive properties of Veripos Limited, and/or their affiliates within the Autonomous Solutions division of the Hexagon AB group of companies ("Hexagon").

No part of this document may be reproduced, displayed, distributed, or used in any medium, in connection with any other materials, or for any purpose without prior written permission from Hexagon. Applications for permission may be directed to contact.ap@hexagon.com. Unauthorized reproduction, display, distribution or use may result in civil as well as criminal sanctions under the applicable laws. Hexagon aggressively protects and enforces its intellectual property rights to the fullest extent allowed by law.

This document and the information contained herein are provided AS IS and without any representation or warranty of any kind. Hexagon disclaims all warranties, express or implied, including but not limited to any warranties of merchantability, noninfringement, and fitness for a particular purpose. Nothing herein constitutes a binding obligation on Hexagon.

The information contained herein is subject to change without notice.

© Copyright 2025 Hexagon AB and/or its subsidiaries and affiliates. All rights reserved.





1.11 Equipment care

This section summarizes safety guidelines when installing the LD8 unit.

1.11.1 Unpacking and inspection

Carefully unpack and inspect the unit. If the equipment appears damaged, then return it using the original packaging. Responsibility for damage will not be accepted if the approved packaging is not used. Ensure all the major items and the ancillary equipment are supplied. If any items are found to be missing, contact the system supplier or Veripos as soon as possible.

1.11.2 Safety warnings

Always observe the following safety precautions:

- Always disconnect the LD8 and associated equipment from the power supply when connecting equipment.
- Before replacing a fuse, disconnect the equipment from the power supply.
- · Always use the power connections supplied with the unit.
- Ensure adequate air circulation to ventilate the unit, especially to the sides, to avoid heat build-up.
- Avoid excessive heat, humidity, dust or vibration.
- Never use the equipment in damp or wet conditions.
- Do not use the equipment where it may be subjected to dripping or splashing liquids.
- Disconnect electrical power from the DC power supply.
- Connect only to a power supply with a voltage corresponding to that marked on the unit.

1.11.3 Installation

During installation ensure the following:

- DC power supply is disconnected. The power connection is easily accessed on the unit rear.
- The unit is secured using the holes in the base plate. Position the unit to ensure there is ample spacing for access to the interface panel and adequate ventilation during normal operation.
- All cables are routed safely to avoid sharp edges, bends and pinches.
- Only the cables specified within this manual are used for interconnection of the equipment.

1.11.4 Maintenance

Clean the unit using a clean dry cloth only. Do not wet the unit or allow the penetration of water. Do not use solvents to clean the unit.

1.11.5 Servicing

This unit contains no user-serviceable parts. Please refer all repairs to a qualified service agent or Veripos.

1.11.6 Fault diagnosis

Follow the guidance in this document to correctly install the LD8. Where the LD8 does not perform as indicated firstly check all connections before contacting your supplier or support.veripos@hexagon.com for assistance.





2 Hardware overview

This section provides an outline description of the LD8 receiver, detailing the different connectors and LED indicators. It also lists information on the internal GNSS receiver, describes the physical characteristics of the LD8, provides information on the different possible LED statuses, and details the interface panel inputs.

2.1 System overview

Encased in a rugged GNSS enclosure, the LD8 can deliver reliable performance in various challenging offshore environments.

- The LD8 is a small, lightweight and low-power system.
- Veripos provide a +9 to +36 VDC power supply with the LD8
- System design allows for easy integration into space and weight-constrained marine applications
- Receives L-band on multiple channels, providing access to worldwide Veripos correction services
- Offers GNSS multi-constellation heading and positioning data for dynamic environments
- The unit incorporates front panel LED indicators for status monitoring
- Configurable via WebUI or Veripos Quantum visualization software







2.2 Connectors, LEDs and I/O ports

The LD8 can communicate with other devices, using serial or Ethernet ports.

2.2.1 Interface panel

The LD8 interface panel has several connectors for interfacing with the unit:



/eripos 🔶

2.2.2 Connector types

Connector	Label	Connector type	Description	
	ANT 1	SMA	Primary GNSS connector. Used for the POSITION reference antenna and the L-band correction signals	
	ANT 2	SMA	Secondary GNSS antenna ONLY used for GNSS HEADING systems.	
		RJ45	Ethernet network 100 / 1000	
	СОМ	USB Micro A/B	A USB 2.0 port used to communicate from a computer to the receiver using a USB cable	
	PORTS		Provides access to communication signals on the receiver. This includes:	
		High Density 26 pin D-Type	 1 Pulse Per Second output (+3.3 volts pulses) Three bi-directional serial ports COM1 RS-422/RS-232 user selectable COM2 RS-422/RS-232 user selectable COM3 RS-232 	
	TRANSFER	USB Micro A/B	Currently not supported	
	PWR	SAL M12 5 Pin	+9 to +36 VDC power input. Multipole connector	



2.2.3 Serial Ports

The LD8 has three serial ports: COM1, COM2 and COM3, accessible via the High Density 26 pin D-Type connector. Refer to the High Density 26 Pin D-Type connector section for more details.

eripos 🍪

Port	RS-232	RS-422	Flow control
COM1	Yes	Yes	RTS/CTS
COM2	Yes	Yes	No
COM3	Yes	No	No

2.2.4 USB ports

The **COM** USB port is available for data output. The **TRANSFER** USB port is currently not supported and should not be used.

2.2.5 Ethernet

The LD8 has an RJ45 socket that supports 10/100Base-TX Ethernet for interfacing to other IP enabled systems. The Ethernet port supports IPv4 Internet layer.

2.2.6 Power

The systems power input is required to be 9 to 36 Volts DC, using less than 1 Amp at 12 volts operation. On power up there is a 1.5 Amp in-rush (for a 12VDC power supply).

CAUTION

If the voltage supplied is below the minimum specification, the receiver will automatically shut down.

If the voltage supplied is above the maximum specification, the receiver may be permanently damaged, voiding the warranty.



CAUTION

The supply must be capable of providing enough current to operate the LD8, including the initial inrush transient. The AC / DC power adapter should be protected with a 6 Amp fuse. The DC supply can be current limited to 6 Amp with an external fuse.





2.3 Interface panel connections

This section details the antenna and data connectivity available from the LD8 interface panel.

reripos 🔶

2.3.1 Coaxial

The LD8 interface panel is fitted with two SMA antenna connectors labelled ANT 1 and ANT 2:



Interface panel of LD8 with two GNSS antenna connectors

- The L-band and GNSS position antenna should be connected to the ANT 1 connector.
- Where the LD8 will be used to compute a heading, a second GNSS antenna should be connected to **ANT 2** connector.



GNSS Heading Solution Direction

2.3.2 Data cables

The LD8 System is supplied with a multiport adapter that splits out into cabling for COM1, COM2, COM3 and 1 PPS signal from a 26-pin high-density connector:







2.3.3 LEDs

There are five LED indicators used to communicate the receiver status to the user:



LED	Description
1. TRANSFER	Used for transferring logged data
2. GNSS	Indicates the position status of the receiver.
3. LOG	Indicates the status of logging to the receiver internal memory
4. INS	Not currently supported
5. PWR	Indicates the power status

2.3.4 PWR LED

State	Description
Solid green	Operational mode
Solid yellow	In the process of booting
Solid red	Error, or update of receiver component in progress

2.3.5 GNSS LED

State	Description
Solid green	PPP (APEX or Ultra) solution
Slow green blink	RTK
Fast green blink	DGNSS (Standard or SBAS) solution or uncorrected
Solid yellow	No solution

2.3.6 LOG LED

State	Description	
Off	LD8 is connected to a computer as a mounted device	
Green blink	Logging to internal memory	
Green solid	Internal logging stopped	
Green/yellow alternating blink	Logging to internal memory with low memory available	
Yellow solid	Internal logging stopped with low memory available	
Yellow fast blink	Memory is busy	
Red solid	Internal memory full and system is utilising a rolling log, or memory has corrupted	



3 LD8 installation

HEXAGON

This section provides guidance on the installation of the LD8 receiver. In the event of difficulty contact your supplier or Veripos (https://help.veripos.com).

3.1 LD8 schematic example

The schematic shown below is one example of an antenna setup arrangement. Please be aware that other antenna configurations are possible. For long-term installations, always contact to obtain setup drawings specific to your installation, as these may differ from the example below.







3.2 Location guidelines

When choosing installation locations, the following requirements should be taken under consideration:

- 1. Ensure adequate ventilation for free air flow to the main unit. This is especially important when working in hot or humid conditions. See section Ventilation Requirements for more details.
- 2. Locate unit in areas free from excessive dust or smoke.
- 3. Avoid locations that experience excessive vibration.
- 4. Avoid exposure to high temperatures.
- 5. Shield the unit from direct sunlight.
- 6. Mount the unit securely to prevent movement.
- 7. Ensure there is easy access to the interface panel.
- 8. Avoid mounting the receiver in confined spaces. Ensure sufficient slack remains in unit cabling to allow the rear of the unit to allow easy access.
- 9. Ensure all bends in coaxial cables are maintained above minimum bend radiuses.
- 10. Use short tails of flexible coaxial cable (e.g. LMR-240). Ensure sufficient strain relief on the main antenna coaxial to avoid stress being placed on coaxial connectors.

3.3 Mounting



NOTE

Before mounting the LD8 take a note of the system serial number, which typically starts with 'NMPL' and which can be found on the underside of the unit.

Mount the LD8 on a secure, stable surface. The unit can be secured via four M5 mounting holes (imperial size #10), as shown in the figure below. Take care not to overtighten as this will result in damage to the housing. Note that the torque of the screws should not exceed 15 inch-lb.







3.4 Ventilation requirements

The LD8 needs 15-25mm clearance all-round to allow an adequate flow of air:



3.5 Antenna installation

This section provides general guidance on installation of antennas and cabling. It is important to the ongoing performance of your system that a high-quality installation is performed, as this will ensure optimum performance and reliability.

NOTE

After equipment installation it is recommended that a calibration survey is carried out to compute the heading offset (also referred to a C-O) and the position offset (Primary GNSS antenna). The position offset and heading offset should be entered within the navigation or DP software.

3.5.1 GNSS / L-band antenna installation guidelines

The GNSS antenna receives both multi-constellation and L-band communication satellites (used for Veripos Correction Signals).

This section describes best practice when positioning and installing your GNSS antenna/s.

For more details please refer to Veripos document *Antenna and Coaxial Cable Installation* provided as part of the installation documentation.

Antennas should be located with a clear 360° view of the sky. The best way to ensure this is to mount the antenna at the highest possible location. If the GNSS antenna does not have good satellite visibility, there will be times when system performance is degraded.

3.5 Antenna installation





eripos (

Examples of good installations – Antennas placed at top of mast with good spacing

During installation observe the following additional guidelines:

- Offsets to the GNSS antennas must be measured carefully to ensure that no errors are introduced to the DP, Survey or Navigation systems.
- Care must be taken to ensure that antennas are not installed in the direct path of transmissions from vessel radar, Inmarsat systems, VSAT systems or high-power HF (whip/wire antennas).
- If the antennas cannot be installed directly at the top of the vessel mast or structure, it is essential that the mounting point is sufficiently strong for this purpose. The installation must be able to withstand vibration and wind over a period of many years of operation.
- Stainless steel brackets and mounts are recommended to mitigate the effects of saltwater corrosion.
- A mounting pole can be used with a 5/8"x11 UNC threaded end (standard marine mount). The pole can be attached by welding, or by using "U" clamps as above. This method allows the antenna to be mounted without the need for a bracket.
- Ensure that grease (such as copper slip) is applied to the threads when installing the antenna.
- Fit the antenna to the bracket and clamp the bracket to the mounting pole or the mast by using Uclamps. When mounting the antenna on an extension pole, fit the antenna to the pole first for ease of handling at height.
- If the threaded pole is already installed up the mast, use a small length of coaxial cable attached to the N-type connector as a safety lanyard for the antenna.
- Carefully connect the coaxial cable following manufacturers' guidelines. Form cable below the antenna into a small loop, approximately 150–220 mm (6 to 8 inch) in diameter.
- Attach the loop to the mounting pole under the antenna to provide strain relief from the cable.





3.5.2 Placement for heading antennas

Careful consideration for the placement of the primary and secondary antennas is required to maximise the LD8 GNSS heading accuracy.

3.5.2.1 Antenna separation

The GNSS heading solution accuracy is largely determined by the distance (or baseline) between the primary and secondary antennas. The larger the baseline, the better the heading precision will be.

Under ideal GNSS clear-sky conditions, the accuracy of the GNSS heading solution largely depends on the distance between the primary and secondary antennas. Increasing this baseline improves the heading measurements by facilitating more effective position triangulation, thereby minimizing errors.

The table below shows typical GNSS heading precision values for different baseline lengths. Veripos recommends maintaining a baseline of at least 2m.

Baseline	GNSS Heading Accuracy (RMS)
2m	0.08°
4m	0.05°
10m	0.02°

3.5.2.2 Antenna orientation and height

The heading direction is computed from ANT 1 to ANT 2.

Assuming the antennas are mounted along the vessel centreline, with ANT 2 being the furthest forward antenna, the GNSS heading would closely reflect the vessel heading. In the below example, a small heading alignment correction would need to be applied in the navigation system software.



In the next example, Antenna 1 and Antenna 2 are installed perpendicular to vessel North with the Antenna 1 at the port side and Antenna 2 at the starboard side. A larger correction offset (C-O) would be required in the navigation system software to align the GNSS heading to vessel North.







NOTE

The provided examples are simplified for illustration purposes. To achieve optimal heading accuracies a calibration must also be conducted.

Antenna 1 and Antenna 2 should be installed at similar heights to ensure consistent heading. If this is not done the heading solution will be noisy, due to each antenna being subject to different amounts of vessel motion (such as vessel roll):



The effect of vessel motion when antennas (blue) are mounted at different heights





3.6 Coaxial cable installation

Veripos can supply pre-terminated LMR type coaxial cables. The LMR cable type has been found to give the best overall technical and cost-effective performance. When cables are supplied by Veripos they will be supplied with 2m tails to allow for connection from main cable run to the antenna and the receiver.

It is necessary to attenuate the various GNSS and differential signals at different rates depending on the signal type and the quality of the coaxial cable.

The following table shows the maximum recommended cable length for signal types for three types of coaxial cable. It is best practice to use low loss cable, before resorting to inline amplifiers.

	L1 GNSS Only	L1/L2 GNSS	L-band
LMR-400	70 m / 229 ft	52 m / 170 ft	120 m / 393 ft
LDF4-50	130 m / 426 ft	110 m / 360 ft	210 m / 688 ft
LMR600	110 m / 360 ft	90 m / 295 ft	180 m / 590 ft

3.6.1 General cable guidance

The Veripos recommended cable for the antenna runs is LMR-400. It is highly recommended that LMR-240 (thinner and more flexible) terminated tails are used at both ends of the LMR-400 cable to ease the attachment to antennas and receiver RF connectors.



Terminated tails of LMR-240

When running multiple coaxial cables Veripos recommend labelling to ensure cables are attached to the correct antennas and equipment.



Survey the route of the antenna cabling to ensure:

1. The total length of the cable run does not exceed the supplied cable length for this installation. Contact your supplier or Veripos if this is the case.

2005

- 2. The cable does not cross or run parallel with any **single phase or three phase mains cable** (110 VAC, 220 VAC or 440 VAC) or any **high-power RF cables** leading to transmitting devices such as Inmarsat and VSAT domes.
- 3. The cable avoids the proximity to fluorescent lighting and wiring.
- 4. The cable is not placed under tension. A **support wire** is used where the cable run has to cross a free space and does not rely solely on cable ties for support.
- 5. Sufficient space is available in the selected cable entry through the bulkhead, for the connectors to pass through without damage. If the connector cannot pass through the cable entry it may be necessary to cut the connector off and re-terminate once the cable has been passed through.
- 6. The cable is **not pinched**.
- 7. The route is **free from all burrs or sharp edges** that could cut the cable jacket over time and lead to water ingress.
- 8. All **connectors and couplers are completely sealed** from the environment with overlapping layers of self-amalgamating tape and finished with layers of electrical tape or Scotchkote.
- 9. **Stress loops** are fitted to prevent excess force on the connectors, in particular on the antenna connectors.
- 10. The minimum bend radius for the cable is not exceeded.





Typical cable installation in a bridge mast area

3.6.2 Coaxial cable connection to LD8

The LD8 contains a GNSS receiver capable of tracking L-band. Additionally, a GNSS antenna is required to be connected to Antenna 2 for computation of a valid GNSS heading. Antenna 2 cannot be used for receiving differential corrections or positioning.



Interface panel of LD8 with two GNSS antenna connectors



4 Configuration and operation

4.1 Introduction

Users may configure the LD8 using Quantum software or the LD8 WebUI. For configurations that require status monitoring of Veripos positioning solutions, refer to the Quantum User Manual. If Quantum is unavailable, users must configure the LD8 through the WebUI, as detailed in this section.

4.1.1 Ethernet connection

The LD8 is equipped with Ethernet (10Base-T/100Base-TX) support, ensuring reliable configuration and interfacing with other vessel systems. The Ethernet port supports the IPv4 Internet layer and TCP/IP transport, providing users with a stable and secure connection. A PC or laptop with an Ethernet port and an up-to-date version of Microsoft Edge, Mozilla Firefox, or Google Chrome is required to configure the LD8 for operation. Microsoft Edge comes pre-loaded onto Veripos PCs when issued.

Veripos ship the LD8 with a factory default IP address of 192.168.2.8. Users must configure connecting laptops or PCs to use the same IP subnet. If the LD8 requires configuration to join an existing TCP/IP network, the commands to assist configuration can be found in the section Ethernet configuration.

4.1.2 WebUI connection

After establishing network connectivity to the LD8, open a browser and enter the default LD8 IP of 192.168.2.8 into the address bar to load the LD8 WebUI:

Ø Status ∃≟ (Configuration 🏟 Setti	ings 🕶 🔧 Tools 🗝	🗈 Device 👻 ?	Help 👈 Login
Warning Warning vosition RTK PPP S atitude 57.2013681 ongitude -2.1922966°	Single ∘ Height 11	4.42 m Device Goo Model L CPU Usage 4 Logging A	d D8 Time (16% Storag Active Interfe	UTC) 14:23:07 e Usage 44% rence Not Detected
Positioning Warning () Operating Mode Receive Positioning RTK [PP] Single Latitude 57,2013681* Longitude -2,1922966* Height 114.42 m Heading 24.66* 2d-5D 0.02 m Datum WGS84 I Help Satellite View Coord Tracked 1000		Active Log File Size Log File Nam Messages	Logging Active Log File Size 1680 Kf Log File Name NMPL Messages BDSBCI	
CORV SS	8 27 2 28 5 43 2 28 2 2 2 2		46% 29 44% 29 63 °C age 5.1 V rent 54.6 mA	Good Good Good Good Good Good
Help				





4.2 WebUI status

Connecting to the LD8 via Ethernet and loading the WebUI will present the user with the LD8 WebUI *Home > Status* page. This page displays information relating to the status and behaviour of the system. To gain access to any other pages or WebUI functionality, users must use the **Login** option located in the top right-hand corner of the page. To log into the system, locate the LD8 serial number, which typically starts with 'NMPL' and can be found on the underside of the unit. When prompted, use the LD8 serial number as the password and click **Log In**. Changing the password is possible, as detailed in section LD8 password.

💋 Status 🛛 荘 Configuration 🔹 Settings 👻	💐 Tools 👻 🎛 Device	e 👻 🕜 Help 🔸 Login
PositioningWarningPositionRTKRTKPPPSingleLatitude57.2013681°Height114.42 mLongitude-2.1922966°	DeviceGoodModelLD8CPU Usage46%LoggingActive	Time (UTC) 14:23:07 Storage Usage 44% Interference Not Detected
Positioning Warning⊙ Operating Mode Receive Positioning RTK Positioning RTK Latitude 57.2013681° Longitude -2.1922966° Height 114.42 m Heading 24.66° 2d-SD 0.02 m Datum WGS84 Image: Provide the state of the stat	Logging Active Log File Size Log File Name Messages	1680 KB NMPL18400003N_148.L BDSBCNAV1EPHEMERIS BDSBCNAV3EPHEMERIS BDSECNAV3EPHEMERIS BDSEPHEMERIS BESTPOS BESTSATS GALFNAVEPHEMERIS GALFNAVEPHEMERIS GALFNAVEPHEMERIS GLORAWEPHEM HEADING2 IONUTC ITDETECTSTATUS LBANDTRACKSTAT LUASTATUS PPPPOS RANGE RAWEPHEM RXCONFIG RXSTATUS VERIPOSINFO VERIPOSINFO VERIPOSINFO VERIPOSTATUS VERIPOSTATUS
AORW 30 23 25 27 2 2 2 2 2 GPS GLO GAL BDS QZSS LBAND 10 6 8 8 0 2 0 0 0 0 0 0 0 0	Device CPU Usage Storage Usage Temperature Antenna Voltage Antenna Current ? Help	Good 46% Good 44% Good 63 °C Good 5.1 V Good 54.6 mA Good
0 1 0 0 0 0 0	Interference Not Detected	Good





4.2.1 WebUI Status page items

At the top of the page is a summary bar containing system information. Below this, the main body of the LD8 WebUI *Home > Status* page splits into several boxes, with each box containing system information:

Item	Description			
Positioning	Information relating to the operating mode, calculated position type, latitude, longitude, height, heading (if available), 2d-SD and datum.			
Satellite View	A polar plot showing currently tracked satellites. As shown on the right, clicking on any satellite will reveal elevation, azimuth and signal strength information for that satellite. Highlighted below the plot are the numbers of satellites used in the solution (green), unused (orange), and unhealthy (red).			
Ports	Information regarding available ports. Highlights which ports are configured for input (and/or) output, as well as which are available and in use (green), available but idle (orange).			
Logging	The system logging status. Includes present log file size, the name of the currently logging item and which messages are being logged.			
Device	Present CPU and storage usage, temperature, antenna voltage and current.			
Interference	Highlights detected interference.			
PPP Corrections	Provides corrections information including tracking status, carrier to noise ratio (C/No) and percentage of bits successfully received from the primary L-Band signal.			
Heading	Heading and pitch information, and baseline length.			

4.2.2 Sending commands via WebUI terminal

Users logged into the LD8 may configure the system by using terminal commands. The WebUI provides a terminal window through which commands and status information from the unit can be sent and received. Access the WebUI terminal by clicking on **Tools** on the top bar then **Terminal**.

An entered command may be sent to the unit using the Return/Enter key on the keyboard. They will appear in the Terminal in green, with echoed responses from the LD8 appearing in black.

Terminal	
>	
	\circ \circ
Help	+ 🖬





Sending commands will trigger one of three different responses from the LD8:

Status response

When requesting system status information, such as querying which L-band beam/s are presently being tracked, the LD8 should respond with an '<OK' echo, followed by the requested information.

Acknowledgement response

When successfully making a configuration change a single or multiple line response containing `<OK>' can be expected.

Rejection of command

A rejected command will be flagged as such with 'INVALID MESSAGE' or 'ERROR' appearing somewhere within the echoed response, or no response will be received. These responses indicate that a command has not been understood, or that a command has not been successfully implemented.

4.2.3 Saving changes

Whilst configuring the LD8 via the WebUI terminal, any configuration changes made will not get automatically saved. Although any configuration changes made may appear to immediately work, **without the use of a save command these changes will be lost in the event of a power cycle**. One command is used for saving network changes and another command is used for saving all other changes. Once either of the below commands has been sent an acknowledgement response should be received:

Command	Description
SAVEETHERNETDATA	Saves any Ethernet configurations
SAVECONFIG	Saves all settings excluding Ethernet configurations

4.3 LD8 password

To login to the system users will need to locate the LD8 serial number, which typically starts with 'NMPL' and can be found on the underside of the unit or in the Log File Name on the WebUI Status page. Before proceeding with mounting or configuration of the LD8, users may wish to change the password from the LD8 serial number default.

4.3.1 LD8 password configuration via terminal

The LD8 password can be changed via the terminal.

The LD8 password can be changed from one password (such as LD8 serial number) to a new one by entering:

SETADMINPASSWORD OLDPASSWORD NEWPASSWORD

To change the LD8 password back to the LD8 serial number enter:

FRESET USER ACCOUNTS





4.4 LD8 firmware

To verify the present firmware on the LD8, send the below command:

LOG VERSION

The following information will appear in the terminal program. The firmware version has been highlighted:

GPSCARD "FDDRYNTVEA" "DMMU205000412" "OEM7720-1.01" "OM7CR0814RN0000 OEM7FPGA """OMV070001RN0000" "" DEFAULT_CONFIG "" """""EP7CD0814RN0001" "" "2022/Oct/13" "15:43:41 APPLICATION """" """EP7PR0814RN0000" "" "2022/Oct/13" "15:43:35" PACKAGE "" "" "" "EP7PR0814RN0000" "" "2022/Oct/13" "15:43:38" DB_LUA_SCRIPTS "SCRIPTS" "Block1""" "SaM_4.1.0.4" "" "2022/Oct/10" DB_WWWISO "WWWISO" "O" "" "1.9.0" "" "2022/Aug/08" "16:44:47" ENCLOSURE "PWRPAK7D-E1" "NMPM21030008J" "" ww WIFI "RS9113" "" """1.7.12" "" "2022/Oct/13" "15:43:48" REGULATORY "US" "" "" "" ""





4.5 L-band configuration

Tracking of an L-band beam is required to receive Veripos service correction and activation data. This section will detail how to establish and confirm successful L-band tracking to make use of Veripos services. Section NTRIP configuration details how to configure the LD8 to receive corrections via NTRIP.

Auto is the recommended L-band selection. It automatically selects the three highest elevated available L-band beams for a location and merges all the correction information within the position calculations.

Auto effectively mitigates the risk of losing signal from a manually assigned L-band signal and losing positional accuracy, such as through signal blockage or during increased ionospheric activity. Should an L-band beam be lost when Auto is selected, the receiver will use the correction data from the other available beams without any loss in positional accuracy.

The receiver also allows for the selection of a single L-band beam. If a single beam is selected, it will disable the Auto Beam selection. Veripos have five beams available as detailed below and, in most regions, more than one beam should be available. A global map with a beam overlay can be found in the Appendix, however, the below table can be used as a general guide:

Beam Name	Coverage
98W	North America, Gulf of Mexico, South America
AORW	North America, Gulf of Mexico, South America, North Sea, West Africa
25E	North Sea, Mediterranean Sea, Africa, Persian Gulf, Caspian Sea
IOR	Asia, Australasia, Indian Ocean, East Africa, Persian Gulf, Caspian Sea, East Mediterranean
143.5	Asia, Australasia, Indian Ocean

Where possible, different Veripos receiver units on the same vessel should be set to different beams to maximise redundancy.

4.5.1 Selecting beam via WebUI

To select Auto beam (or a single beam if required) navigate to **Configuration > Positioning** and click **Receive (Rover)**, followed by **Next**. Scroll down to the **PPP** section and select either Auto or an available beam, followed by **Apply**:

PPP Region Selection Auto					
Region Selection					
Auto			○ 25E		
◯ 143.5E	○ 98W	O Manual			





4.5.2 Selecting Auto beam via terminal

To enable the use of Auto beam enter the following:

ASSIGNLBANDBEAM AUTO

4.5.3 Selecting a single beam via terminal

The format for assigning a specific L-band beam (98W, AORW, 25E, IOR, 143.5) is as follows:

ASSIGNLBANDBEAM BEAMNAME

4.5.4 Entering a custom beam frequency via terminal

A custom L-band beam name and frequency (in Hz) can be manually entered, however this should be used only under the instruction of Veripos Support. The format for assigning a user L-band beam is as follows:

ASSIGNLBANDBEAM MANUAL BEAMNAME FREQUENCY 1200

4.5.5 Tracked L-band beam and signal strength status via terminal

The presently tracked L-band beam/s and signal strength/s can be found by entering:

LOG LBANDTRACKSTAT

The returned status will display information relating to any of the beams that are being actively tracked or searched for. The tracked L-band beam names will be found in quotation marks at the start of each line, i.e. "25E". The value after the beam name relates to the L-band beam frequency followed by the baud, which is typically 1200 bps. The signal strength will be found in the 8th field along for each beam line. Signal strengths are output in dB and a value of 36.5dB or above is optimal.

When in Auto beam mode the terminal output will be similar to the below:

```
LBANDTRACKSTAT WCOM1_30 0 50.5 FINESTEERING 2062 457753.000 0a000020 29e3
15441
3
"IOR" 1545865000 1200 974c 00c2 0 -91.416 43.052 3.6091 15658.910 298176
2330
746 38166528 290966 0.0000
"25E" 1545825000 1200 974c 00c2 0 -223.267 43.704 3.8057 78985.820 1504384
5 5 192561152 515 0.0000
"AORW" 1545845000 1200 974c 00c2 0 -280.645 40.858 2.8379 78986.523
1504448 607 571 192569344 68081 0.0015
```





4.5.6 HDR mode configuration via terminal

Enabling HDR mode can assist with L-band tracking when potential interference sources are present. HDR Mode uses signal processing to dampen potential sources of RF distortion, at the cost of increased CPU usage. It is recommended that if any L-band tracking issues are observed (intermittent, low or no signal) this option is enabled.

HDR mode can be enabled by entering:

ITFRONTENDMODE LBAND HDR

HDR mode can be disabled by entering:

ITFRONTENDMODE LBAND CIC3





4.6 NTRIP configuration

To receive RTCM corrections via NTRIP, an activation from Veripos Support is required, and the LD8 must also be connected directly to a network with external access to obtain Veripos NTRIP caster data.

′eripos 😚

CAUTION

NTRIP should only be enabled if included in the Veripos SAL. Please contact Veripos Support to confirm if you are unsure.

To configure the LD8 to receive Veripos corrections via NTRIP, use an internet-connected laptop on the same network as the LD8 and browse to the Veripos NTRIP caster **http://ntrip-veripos.com:2101** to verify that connectivity via port 2101 is available. The browser should reply with four lines of structured binary data. No reply may suggest that port 2101 is blocked, in which case, contact your local IT support.

4.6.1 Access NTRIP corrections via terminal

NTRIP can be established on NCOM1, NCOM2 and NCOM3 by sending the below commands (NCOM1 example):

NTRIPCONFIG	NCOM1	CLIENT V	. sid-	output.com:2	2101	SID08	SID	MELs9tPw4	ALL
INTERFACEMOD	E NCOI	M1 VERIPOS	NONE	OFF					
SAVECONFIG									

For testing purposes, to confirm NTRIP correction connectivity, send the following command:

ASSIGNLBANDBEAM IDLE

After 360 seconds, if solutions remain in use, then NTRIP is correctly configured. Sending the following command will ensure L-band connection availability remains available if required in the future:

ASSIGNLBANDBEAM AUTO

4.6.2 Access NTRIP corrections via WebUI

NTRIP can be established on NCOM1, NCOM2 and NCOM3. Navigate to **Configuration > Positioning** and click **Receive (Rover)**. Scroll down to the **PPP** section and select NCOM1, NCOM2 or NCOM3, followed by **Apply**:

NTRIP	
□ NCOM1	
NCOM2	
П NCOM3	

For testing purposes, to confirm NTRIP correction connectivity, refer to section Selecting beam via WebUI and connect to an unavailable beam. After 360 seconds, if solutions remain in use, then NTRIP is correctly configured. Select Auto beam to ensure L-band connection availability remains available if required in the future.




4.7 Activation and deactivation of Veripos services

To activate or deactivate Veripos services, firstly ensure that the LD8 is switched on and tracking an L-band beam with a healthy signal level (>36.5 dB). Tracking of a L-band beam is required as activation and deactivation updates are sent via the beam.

Email Veripos Support (support.veripos@hexagon.com) with the Unit ID, Vessel Name, SAL number and services required.

NOTE

Veripos Support cannot enable services unless an active SAL exists. To avoid delay, please make sure that the SAL number is known and available prior to requesting services.

4.7.1 Checking unit activation status via terminal

To check the present activation status of an LD8 enter:

```
LOG VERIPOSSTATUSA
```

The unit activation status can be either ENABLE (or) DISABLE.

The unit L-band sync status can be either LOCKED (or) NO_SIGNAL. For activation of Veripos services the unit is required to have a sync status of LOCKED. Refer to section L-band configuration for assistance on selecting an L-band beam if required.

An example of a status message response, with activation status showing DISABLE and Sync status LOCKED:

```
VERIPOSSTATUSA, WCOM1, 0, 67.0, FINESTEERING, 2040, 375008.267, 02008020, 0719, 149
70; DISABLE, LOCKED*0d439ce3
```

4.7.2 Checking unit ID and activation service code via terminal

If in doubt as to the LD8 unit ID and/or the activation service code enter the following:

LOG VERIPOSINFO

The LD8 unit ID is required for Veripos to activate services and each activation/deactivation is unique to each unit ID. The activation service code can be used to determine what services the unit is activated to receive.





In the below terminal output, the unit has been successfully activated and the unit ID has been highlighted, followed by the service activation code:

/eripos 🤅

VERIPOSINFO WCOM1 0 66.0 FINESTEERING 2039 314993.573 02008020 2bd7 14970

In the below terminal output the unit has not yet been activated. The unit ID has been highlighted and no value yet exists for the service activation code:

```
VERIPOSINFO WCOM1 0 66.5 FINESTEERING 2040 378378.140 03008020 2bd7 14970
<123456 UNASSIGNED 00000000 ""
```

NOTE

While a unit may be enabled for single PPP services it may not be fully utilising the service as further configuration may be required to choose which Veripos PPP service to use (APEX or ULTRA).





4.8 Calculation configuration

Several calculation options are available, configurable using commands that can update the Veripos service types in use.

4.8.1 PPP mode selection via terminal

Veripos APEX and Ultra PPP solutions allow for worldwide decimetre accuracy positioning with no range limitations. On systems with corrections subscriptions that include both Ultra and APEX, Veripos recommends users select **AUTO** to set the LD8 to prioritise APEX, with Ultra available as a fall-back should APEX become unavailable:

PPPSOURCE AUTO



If only one PPP solution is enabled, users may configure the LD8 to use the activated service by specifying either APEX or Ultra as follows:

PPPSOURCE APEX

4.8.2 SBAS configuration via WebUI

The LD8 is capable of tracking and using correction data from Satellite Based Augmentation Systems (SBAS). If SBAS is enabled a SBAS DGNSS solution will be output in the event of Veripos solutions failure.

To enable/disable SBAS navigate to **Configuration > Positioning** and click **Receive (Rover)**, followed by **Next**. On the next page expand tick the **SBAS** box to enable SBAS. then select region (**Auto** is recommended). Click **Apply** to confirm any changes.

New Operating Mode	Peceive (Pover)			
Select correction type	e(s)			
RTK Input Forme	s NA Inp	at ports NA		*
PPP Region Sel	ection Auto			~
SBAS				^
Region Selection				
Auto		O GAGAN	O MSAS	
O QZSS	O WAAS			





4.8.3 SBAS configuration via terminal

The LD8 SBAS mode can be enabled or disabled via the terminal.

The SBAS positioning mode can be enabled by entering:

SBASCONTROL ENABLE AUTO

The SBAS positioning mode can be disabled by entering:

SBASCONTROL DISABLE

4.8.4 Heading offset and output frequency via WebUI

The Heading can be turned on or off from the **Heading** switch. The heading offset and the heading output rate can be configured within the WebUI by navigating to **Configuration > Heading**. The heading offset value can be set between -180o and +180o. The output rate can be set between 1Hz and 20Hz (this does not apply to the HDT output message). Click **Apply** to confirm any changes.

pe							
Onboard	Os	erial					
Onboard							
Heading Offse	t (degrees)		Pitch O	(fset (degrees)			
0.00			0.00				
Heading Output	ut Rate (Hz)						
01	O 2	04	0 5	O 10	20		

4.8.5 Heading offset and output frequency via terminal

A heading offset and the heading output rate can also be configured via terminal. The heading offset value can be set between -180° and +180°. The heading offset can be added by entering:

HEADINGOFFSET HEADINGOFFSETINDEG

The output rate can be set between 1Hz and 20Hz (this does not apply to the HDT output message). The last value of the LOG message is the output rate field (1 = 1Hz, 0.5 = 2Hz, 0.2 = 5Hz, 0.1 = 10Hz, 0.05 = 20 Hz). The output rate can be set by entering:

```
LOG COM1 GPHDTDUALANTENNA ONTIME 1
```





4.9 Ethernet configuration

Network connectivity to the LD8 is essential for configuration and implementing changes. The following sub-sections detail how to check and change the present IP address settings.

4.9.1 IP configuration via WebUI

IP addresses can be checked and configured by navigating to **Settings > Networking**. Within the **Ethernet** Window, the DHCP setting can be toggled to Off or On. Toggling DHCP to Off will allow for Static IP address details to be input. Note the Wi-Fi related features are unavailable at present.

IP Address 10.17.43.246 Subnet Mask 255.255.255.0 Gateway	11
Subnet Mask 255.255.255.0 Gateway	PwrPak7-NMPL18400003N
Gateway	Password
10.17.43.1 @ Help Ca	el Apply Ø Help
🥥 Help Ca	el Apply



4.9.2 Checking IP and subnet status via terminal

To check the current IP settings of the LD8 enter the command below:

LOG IPSTATUSA ONCE

IP and subnet settings will be returned, proceeded by ETHA, within quotation marks as highlighted below:

```
IPSTATUSA,WCOM1_
30,0,65.0,FINESTEERING,2043,203989.000,02008020,7fe2,14970;2,ETHA,
"192.168.1.123"
,"255.255.255.0","192.168.1.1",WIFI,"192.168.19.1,"255.255.255.0","",1,"1.
1.1.1"*d9d1437c
```





4.9.3 Setting a static IP via terminal

The LD8 is preconfigured with a static IP of 192.168.2.8, however this IP address can be changed to a different static IP address. The command to change to a static IP follows the structure of:

′eripos 🔶

IPCONFIG [interface_name] [address_mode] [IP_address] [netmask] [gateway]

An example for this:

IPCONFIG ETHA STATIC 192.168.2.8 255.255.255.0 192.168.2.1

When configured for a static IP address, the LD8 will have a DNS server configuration of 1.1.1.1. To change a DNS server entry, use the DNSCONFIG command:

DNSCONFIG 1 8.8.8.8

4.9.4 Changing IP to DHCP via terminal

The LD8 can be assigned an IP address via DHCP. If changing to DHCP use the IPSTATUSA command to determine the newly assigned IP address.

CAUTION

Changing the IP address mode to DHCP will require verification of any newly assigned IP address, which must be performed through connection to one of the three COM ports.

To automatically assign a dynamic IP to the LD8 use the below command:

IPCONFIG ETHA DHCP

To change the unit back to a static IP, follow the instructions in the above 'Setting a static IP via terminal' section.





4.9.5 PTP configuration via terminal

The option to configure PTP settings provides the LD8 with the ability to use its GPS time to synchronise the clocks on other PTP compatible network equipment. To activate PTP use the below command:

PTPMODE ENABLE

PTP can be disabled by entering:

PTPMODE DISABLE

4.9.6 Switch PTP time scale via terminal

As the PTP time scale does not correct for leap seconds, some users may wish to switch to UTC, which corrects for leap seconds. To switch to UTC, use the below command:

PTPTIMESCALE UTC_TIME

To switch back to the PTP time scale, use

PTPTIMESCALE PTP TIME

4.9.7 Switch PTP profile via terminal

The command to select a PTP profile is given below, with PTP UDP (default) used as an example:

PTPPROFILE PTP_UDP

Users can set PTPPROFILE to the default of PTP_UDP (end to end), PTP_UDP_PEER (peer to peer), PTP_ETH (end to end), PTP_ETH_PEER (peer to peer) or ITUT_G.8275.1_ETH.

4.9.8 Monitor PTP profile via terminal

To monitor the time difference between the receiver's current GPS time as used in log headers and the time provided by the grandmaster clock currently recognized by the receiver, use the following:

LOG PTPDELTATIMEA

The following will be returned, with the current PTP state of the receiver highlighted in orange:

```
PTPDELTATIME USB1 0 69.0 FINEBACKUPSTEERING 2327 144449.000 02000020 1b2f
17398 < PASSIVE 002166fffe05808a 128 128 6 20 65535 002166fffe058090 128
128 6 20 19250 TRUE -0.000001973 7.294318750e-14 7.013048187e-09
1.369241271e-13
```

In the above, the PASSIVE PTP state indicates that the receiver is not acting as the PTP MASTER but is instead acting in a mode similar to the SLAVE state when the clock class is less than 128. This means the receiver is receiving synchronization information from the grandmaster clock but not actively participating in the synchronization process as MASTER.

Note that in the above example output, the offset field (filtered local PTP clock time minus the grandmaster time, expressed in seconds) is highlighted in blue.





4.10 Output configuration

The LD8 is capable of outputting Veripos RTCM data and a selection of message formats via the following:

eripos 💮



- Serial outputs are available for reference within commands or selected in the WebUI by using 'COM1', 'COM2' and 'COM3'.
- **TCP/UDP** output can be established to one of five ports: 3001, 3002, 3003, 3004 and 3005. These are available for reference within commands or selected in the WebUI by using 'ICOM1', 'ICOM2', 'ICOM3', 'ICOM4' and 'ICOM5' respectively. Only one connection can be established to each port.
- **USB** outputs are available for reference within commands or selected in the WebUI by using 'USB1', 'USB2' and 'USB3'. Only one connection can be established to each port.

The available LD8 message types and the associated command variable to use when referencing each type within the WebUI or terminal are shown below:

Message	Command variable
GGA	GPGGA
GST	GPGST
ZDA	GPZDA
GSA	GPGSA
GSV	GPGSV
GLL	GPGLL
VTG	GPVTG
GRS	GPGRS
RMC	GPRMC
HDT	GPHDTDUALANTENNA
TRINAV V3*	VERIPOSTRINAVVERSION V3 1
TRINAV V4*	VERIPOSTRINAVVERSION V4 1
VERIPOS UKOOA*	VERIPOSUKOOASENTENCE
BESTPOS	BESTPOS

*Selection of TRINAV or UKOOA is only possible using the terminal.



4.10.1 Configuring message outputs via WebUI

Navigate to **Configuration > Ports**, where configuration of **COM 1-3**, **ICOM 1-5** and **USB 1-3** ports is available. Using command variables to specify message type, enter the appropriate command variable next to the required COM, ICOM or USB port in the **Messages** field. Select the command variable once it appears in the **Messages** field as shown below and then click **Apply** to confirm settings.

⁄eripos 🔶

Average Pert Ougan romain ONE COM1 IIII NMEA Interface OVATEL COM2 IIIIIIIIIIIIIIIIIIIIIIIIIIIIIIIIIIII	orts								
OVATEL COM2 NMEA Start typing the message name OVATEL COM3 NOVATEL Start typing the message name OVATEL COM3 NOVATEL Start typing the message name OVATEL ICOM1 NMEA Start typing the message name OVATEL ICOM1 NMEA Start typing the message name OVATEL ICOM2 NMEA Start typing the message name OVATEL ICOM3 NMEA Start typing the message name OVATEL ICOM3 NMEA Start typing the message name OVATEL ICOM3 NMEA Start typing the message name OVATEL ICOM4 NMEA Start typing the message name OVATEL ICOM5 NMEA Start typing the message name OVATEL ICOM5 NMEA Start typing the message name OVATEL ICOM5 NMEA Start typing the message name OVATEL USB1 NONE To add messages, first choose an output format OVATEL USB2 NOVATEL Start typing the message name OVATEL USB3 NOVATEL Start typing the message	IONE	*	COM1	¢	*	NMEA	•	GGALONG O	¢
OVATEL COM3 Image: Comstand state of the state o	OVATEL	•	COM2	\$	•	NMEA		Start typing the message name	
VVATEL ICOM1 NMEA Start typing the message name VVATEL ICOM2 NMEA Start typing the message name OVATEL ICOM3 NMEA Start typing the message name OVATEL ICOM3 NMEA Start typing the message name OVATEL ICOM4 NMEA Start typing the message name OVATEL ICOM5 NMEA Start typing the message name OVATEL ICOM5 NMEA Start typing the message name OVATEL USB1 NMEA Start typing the message name OVATEL USB1 NONE To add messages, first choose an output format OVATEL USB2 NOVATEL Start typing the message name OVATEL USB3 NOVATEL Start typing the message name	OVATEL	•	COM3	\$	•	NOVATEL	•	Start typing the message name	
VATEL ICOM2 INMEA Start typing the message name OVATEL ICOM3 NMEA Start typing the message name OVATEL ICOM3 NMEA Start typing the message name OVATEL ICOM4 NMEA Start typing the message name OVATEL ICOM5 NMEA Start typing the message name OVATEL ICOM5 NMEA Start typing the message name OVATEL USB1 NMEA Start typing the message name OVATEL USB1 NONE To add messages, first choose an output format OVATEL USB2 NOVATEL Start typing the message name OVATEL USB3 NOVATEL Start typing the message name	OVATEL	•	ICOM1	\$	•	NMEA	•	Start typing the message name	
VATEL ICOM3 NMEA Start typing the message name OVATEL ICOM4 NMEA Start typing the message name OVATEL ICOM5 NMEA Start typing the message name OVATEL ICOM5 NMEA Start typing the message name OVATEL USB1 NMEA Start typing the message name OVATEL USB1 NONE To add messages, first choose an output format OVATEL USB2 NOVATEL Start typing the message name OVATEL USB3 NOVATEL Start typing the message name	OVATEL	•	ICOM2	\$	•	NMEA	•	Start typing the message name	
VOVATEL ICOM4 VMEA Start typing the message name OVATEL ICOM5 VMEA Start typing the message name OVATEL ICOM5 VMEA Start typing the message name OVATEL USB1 NONE To add messages, first choose an output format OVATEL USB2 NOVATEL Start typing the message name OVATEL USB3 NOVATEL Start typing the message name	OVATEL	•	ICOM3	\$	•	NMEA	•	Start typing the message name	
VATEL ICOM5 * NMEA Start typing the message name VATEL USB1 NONE To add messages, first choose an output format VATEL USB2 NOVATEL Start typing the message name VATEL USB3 NOVATEL Start typing the message name	OVATEL	•	ICOM4	\$	•	NMEA	•	Start typing the message name	
VVATEL USB1 NONE To add messages, first choose an output format VVATEL USB2 NOVATEL Start typing the message name VVATEL USB3 NOVATEL Start typing the message name	OVATEL	•	ICOM5	\$	•	NMEA	•	Start typing the message name	
VVATEL USB2 NOVATEL Start typing the message name DVATEL USB3 NOVATEL Start typing the message name	OVATEL	•	USB1		•	NONE	•	To add messages, first choose an output format	
DVATEL • USB3 • NOVATEL • Start typing the message name	OVATEL	•	USB2		•	NOVATEL	•	Start typing the message name	
	OVATEL	•	USB3		•	NOVATEL	•	Start typing the message name	

To remove any message outputs, click on the '⊗' appearing next to the Command variable and click **Apply**.

4.10.2 Specifying baud via WebUI



To specify a baud for COM Ports 1, 2 or 3 navigate to **Configuration > Ports** click on the cog wheel within the **Port** field:

Input Format		Port		Output Format		Messages	
NOVATEL	*	COM1	\$ •	NONE	•	To add messages, first choose an output format	\otimes





A window will open that will allow for a baud of **2400**, **4800**, **9600**, **19200**, **38400**, **57600**, **115200**, **230400** or **460800** to be selected. The Parity, Data bits and Stop Bits can also be selected. Once these and the appropriate baud have been selected, click on **Done** followed by **Apply**.

⁄eripos 🔶

COM1 Configurati	on		
Baud Rate			
9600	•		
Parity			
• N	e O o		
Data Bits			
07	8		
Stop Bits			
● 1 ○	2		
		Cancel	Done

4.10.3 Message output rate via WebUI

Once a NovAtel command variable has been specified a cog wheel will appear within the right hand corner of the **Messages** field:

Input Format		Port		Output Format		Messages	
NOVATEL	*	COM1	\$ •	NONE	*	To add messages, first choose an output format	\otimes

Clicking on the settings cog will open a **Message Settings** window where an output rate can be specified in the Period field. LD8 receivers are capable of outputting messages at rates of **1Hz**, **2Hz**, **5Hz**, **10Hz** and **20Hz**. Enter the required rate in seconds as per table below and click **Apply**:

Message Settings							ļ
NMEA Log Prefix							
O GP O AUT	ю						
BeiDou Log Prefix							
🔾 gb 💿 bd							
Precision			Quality In	dicator			
● 5 ○ 6	07	0 8	O 2	0 5			
Message		Format		Trigger		Period	
GGA				ONTIME	*	1	S
					Cane		nnlu
					canc		PPIY





4.10.4 Enabling message outputs via terminal

To enable a message, a single command must be sent for each message on each port. Message types can be output on **COM 1-3**, **ICOM 1-3**, or **USB 1-3**. This, along with the message command variable, should be entered in the command line. The command to be used is given below with COM1 and GPGGA used as an example:

LOG COM1 GPGGA ONTIME 1

LD8 receivers are capable of outputting messages at rates up to 20Hz. The last value as part of the LOG message is the output rate field. See below table for the output rates and the command variables:

Output rate	Command variable
1Hz	1
2Hz	0.5
5Hz	0.2
10Hz	0.1
20Hz	0.05

An example of the command for outputting GGA on COM 1 at 20Hz:

LOG COM1 GPGGA ONTIME 0.05

4.10.5 Disabling message outputs via terminal

To disable a message from being output, the command below should be issued to the unit. This consists of the command required, the port and the message type:

UNLOG COM1 GPGGA

To stop all output messages on a single port, the command below can be issued stating the port:

UNLOGALL COM1

4.10.6 Setting GGA precision selection via terminal

It is possible to configure the number of decimal places used in the Latitude and Longitude fields output in the GGA Message. The precision can be set to 5, 6, 7 or 8. When changing the precision value, the same value should be applied to both the Longitude and Latitude. The command requires to state GGA_LATITUDE or GGA LONGITUDE, followed by a precision value detailed in the table below:

Precision	Latitude command	Longitude command
5	NMEAFORMAT GGA_LATITUDE 10.5	NMEAFORMAT GGA_LONGITUDE 11.5
6	NMEAFORMAT GGA_LATITUDE 11.6	NMEAFORMAT GGA_LONGITUDE 12.6
7	NMEAFORMAT GGA_LATITUDE 12.7	NMEAFORMAT GGA_LONGITUDE 13.7
8	NMEAFORMAT GGA_LATITUDE 13.8	NMEAFORMAT GGA_LONGITUDE 14.8



4.10.7 Setting PPP DQI via terminal

When using either Apex or Ultra PPP services the Differential Quality Indicator is a value reported within GGA messages to indicate solution status. The LD8 allows for two configurable behaviours for this value.

′eripos 领

DQI behavior	Command variable
When the calculation is converged to a PPP service the DQI will report the value 2.	2
When the calculation is converged to a PPP service the DQI will report the value 5.	5

The below command example shows the behaviour of the DQI when converged for PPP to a value of 2. The highlighted area below is where the variable of 2 or 5 should be set:

```
GGAQUALITY 4 OUT OF BOUNDS 2 WAAS 2 PPP 2 PSRDIFF 2
```

4.10.8 Setting baud via terminal

The LD8 allows for each serial port to be set at different baud, with 2400, 4800, 9600, 19200, 38400, 57600,115200, 230400 or 460800 available.

To set the baud the SERIALCONFIG command should be used along with the port name for the desired change. An example of the command is below, with the port and baud highlighted:

SERIALCONFIG COM1 9600 N 8 1 N OFF

4.10.9 Setting PPS via terminal

The LD8 allows for the PPS polarity to be configured and set to an increase in pulse from 0v (POSITIVE) or a decrease in pulse to 0v (NEGATIVE). The pulse has a width of 2000 microseconds.

An example of the PPSCONTROL command is given below which shows the pulse being set to POSITIVE:

PPSCONTROL ENABLE POSITIVE

PPS output can be disabled by sending the following:

PPSCONTROL DISABLE

4.10.10 Enabling RAIM Mode via terminal

Receiver autonomous integrity monitoring (RAIM) is a technology developed to assess the integrity of GNSS signals used by a GNSS receiver. RAIM uses redundant signals and a statistical function to determine if there are problems with the positioning solution; in simple terms, RAIM acts as an internal self-check. RAIM is enabled by default. Do not disable RAIM unless advised by Customer Support.

The present state of RAIM may be verified by sending the below:

LOG RAIMMODE





This command will return the RAIM status. In the below highlighted example RAIM is enabled (VERIPOS) rather than disabled (DISABLE):

```
<RAIMMODE WCOM1_30 0 67.0 FINESTEERING 2301 466554.107 02000000 e186 17190
< VERIPOS 0.000 0.000 0.0000000
```

RAIM Mode can be enabled by sending the following:

RAIMMODE VERIPOS

RAIM Mode can be disabled by sending the following:

RAIMMODE DISABLE

4.10.11 Enabling Veripos RTCM output via terminal

Veripos RTCM can be output on any of the LD8 serial COM ports. Within the terminal window enter the commands below where updating COM1 with the desired output COM port number.

UNLOGALL COM1 INTERFACEMODE COM1 NONE RTCM OFF LOG COM1 VERIPOSRAWRTCMDATAB ONNEW

To change the baud of the serial port, send command below. COM should be the same COM port as used in the initial step and the field 9600 replaced with the appropriate baud.

SERIALCONFIG COM1 9600 N 8 1 N ON

4.11 Input configuration

The LD8 is capable of utilising corrections from external sources of Veripos RTCM (RTCM v2, RTCM v3 or CMR) and RTK correction data. For RTK solutions the position will be output in the datum of the correction source.

4.11.1 Inputting external Veripos RTCM via terminal

To input external corrections, you must issue two commands to the unit. These two commands will configure the required input baud and then set the port for decoding of Veripos RTCM data. These commands are SERIALCONFIG and INTERFACEMODE.

The example commands below show configuration of COM1 for input of Veripos RTCM data, with a baud of 115200:

```
SERIALCONFIG COM1 115200 N 8 1 N OFF
INTERFACEMODE COM1 VERIPOS RTCM NOVATEL ON
```

NOTE

The LD8 is preconfigured to receive **RTK** corrections. Only port and interface mode settings need to be applied.





4.12 Rolling log

4.12.1 Viewing rolling log via WebUI

The LD8 is preconfigured to utilise a rolling data log. This data can be used to conduct various types of analysis or for troubleshooting purposes by Veripos. From this data, RINEX observation logs can be generated, if required. If RINEX data is required, please contact Veripos Support.

The Logging Status, current logged file's size and name in addition to the logged messaged are presented on the **Home > Status** page of the WebUI:

Logging	Good
Active	
Log File Size	4086 KB
Log File Name	NMPL18400003N_2.LOG
Messages	ALMANAC
	BDSEPHEMERIS
	BESTPOS
	BESTSATS
	GALINAVEPHEMERIS
	GLORAWEPHEM
	HEADING2
	ITDETECTSTATUS
	LBANDTRACKSTAT
	LUASTATUS
	PORTSTATS
	PPPPOS
	QZSSEPHEMERIS
	RANGE
	RAWEPHEM
	RXCONFIG
	RXSTATUS
	VERIPOSINFO
	VERIPOSRTCMDATA
	VERIPOSSTATUS
	VERSION





4.12.2 Downloading logs

Hourly-separated logs can be found within **Device > Export**. Each log file will be displayed with a date, time stamp and also the file size. As the rolling log builds up there may be multiple pages of stored logs.

To download logs, an FTP transfer utility such as FileZilla needs to be used. Launch FileZilla then connect to the LD8 using its IP address as Host, "admin" for the Username and the LD8 serial number for the password and press Quickconnect. This should establish a connection with the LD8 and will show the logged files in the right bottom panel of the FileZilla. Drag the required files to the appropriate folder on your PC which can be selected in the left bottom panel of FileZilla.

If requested to provide logs by Veripos Support, ensure that the logs cover the period that needs analysing plus 3 hours prior to the event and 1 hour after.

🔁 admin@10.17.43.133 - FileZilla			- 0 ×
File Edit View Transfer Server Bookmarks Help			
Host: 10.17.43.133 Usemares: admin Pesseord:	•• Port	Quickconnect	
Status: Insecure server, it does not support FTP over TLS. Status: Server does not support non-ASCII characters. Status: Logged in Status: Cogged in	06		^
Status: File transfer successful, transferred 25,278,231 bytes in 21 second	8		
	-		v
Local site:	~	Remote site: /	v
	î	B Z System Volume Information	
- OSTS			
194129			
Piloname	Pitess	Filename	Filesize Filetype Last mod Permis (A
	36 378 3	NMPL18400003N_2022-06-21_06-13-15.LOG	25.406.669 Text D., 21/06/19,, -rworw.,
NMPC18400003N_2022-06-21_03-13-14.030	0.276,2	III NMPL10400000N_2022-06-21_05-13-15.LOG	25.878,339 Text D., 21/06/19., -rworw., (
		III NMPL18400003N_2022-06-21_04-13-15.LOG	24,658,307 Text D., 21/06/19,, rworw., (
		MMPL18400000N_2022-06-21_03-13-14.LOG	25,278,231 Text D 21/06/19rworw I
		III NMPL18400003N_2022-06-21_02-13-14.LOG	25,133,109 Text D 21/06/19rworw (
		III NMPL18400003N_2022-06-21_01-13-13.LOG	24,581,379 Tent D., 21/06/19,rworw
		MMPL18400003N_2022-06-21_00-13-12.UOG	24,814,264 Text D., 21/06/19,, -rworw,, (
		III NMPL18400003N_2022-06-20_23-13-11.LOG	24,599,585 Text D., 20/06/79., -rworw., (
		MMPL18400003N_2022-06-20_22-13-11.LOG	25,056,272 Text D., 20/06/19,, -rworw., (
		NMPL18400003N_2022-06-20_21-13-10.LOG	25,243,853 Text D., 20/06/19,, -rworw., (*
c	>	< c	>
1 file. Total size: 25.278,231 bytes		Selected 1 file. Total size: 25,278,231 bytes	
ServeyLocal file Dire., Remote file		Size Prio Status	
Queued files Failed transfers Successful transfers (1)			
			O Output: empty

4.13 Factory reset

Users can perform a factory reset to revert the LD8 to default factory settings; however, only under the advice of Veripos Support should this be undertaken.

4.13.1 Factory resetting via terminal

Users may perform a factory reset by issuing the case-sensitive command:

```
LUA START factoryreset.lua
```



4.14 Applying firmware updates

When outside of operations, users can apply firmware updates via the LD8 WebUI, as detailed below. Before a firmware upgrade, record all system settings - see Appendix section Configuration and settings log.

reripos 🔶

To upgrade via the WebUI

- 1. Unzip the LD8 upgrade zip file to extract the folders 'Core Firmware', 'LUA', 'USB Drivers' and 'WebUI'.
- 2. Within the WebUI, go to **Device > Update**:

🧭 Status	: 크는 Config	uration 🏟 🔅	Settings 🝷	🔧 Tools 👻	🔢 Device -	- 😢 Hel	p ⇒ Logout
Positioning Position	Good PPP Single	Height (Ellip.	.) 108.42 m	Device Goo	Details Storage		
Longitude	-2.6206783°	0.1		Logging	Update		ed
Positioni	ng	7_702003.0	Good	Logging	Restart		Good
Operating	Vlode	Receive		Active			

3. Click Browse to navigate to the extracted folders:

🧭 Status 🔄	Configuration	🌣 Settings 👻 🍾	🔪 Tools 👻	Device -	? Help	⇒ Logout
PositioningGoodPositionPPP SLatitude56.8166Longitude-2.6206	ingle 5983° Height 785°	(Ellip.) 108.42 m	Device G Model CPU Usage Logging	LD8 56% Active	Time (UTC) Storage Usage Interference	10:22:42 OVERWRITE Not Detected
Device / Update						
Update Firm	ware or Softv	vare				
Current Firmware	Version	OM7CR0902	SN0008			
Current Manage (W	Veb) Version	2.5.0				
Select File						
Update files have a ".h Browse	nex" or ".shex" file extens	ion.				
🕑 Help				Apply		





4. Within the Core Firmware, folder select the .shex file and click Open:

veripos 🔶

C:\Demodula	tors\LD8\LD8 4.3	.0\Core Firmware				×
$\leftarrow \rightarrow \cdot \uparrow$	_ << LD8 >	LD8 4.3.0 > Core Firmware v さ	Search Core F	irmware		9
Organise 🔻	New folder					?
Name	N0005.shex	29/11/2023 10:40	SHEX File		31	,787 KB
<						>
	File name:	~	All Files (*.*) Open		Cancel	~

5. With the .shex, selected click Apply:

🕖 Status 🕂 Configuration 🕸	Settings 👻 🔌	Tools 👻	E Device -	? Help	⇒ Logout
Cood Position PPP Single Latitude 56.8166983° Height (Ellip Longitude -2.6206785°	o.) 108.42 m	Device Go Model CPU Usage Logging	od LD8 56% Active	Time (UTC) Storage Usage Interference	10:22:42 OVERWRITE Not Detected
Device / Update					
Update Firmware or Softwar	e				
Current Firmware Version	OM7CR0902SI	N0008			
Current Manage (Web) Version	2.5.0				
EP7PR0900SN0005.shex					
Update files have a ".hex" or ".shex" file extension. Browse					
Help			Apply		

The LD8 will update and then restart:

3%) Updating		Restar) ting	

LD8 firmware updating

LD8 restarting (30-second process)

Once the Core Firmware update is complete repeat, steps 2 to 5 with the **LUA** and **WebUI** folders. Upon completion of uploading the Core Firmware, Lua and WebUI files onto the LD8, re-enter any previously noted settings.



5 Reference information

5.1 Technical specifications

5.1.1 Dimensions in mm



5.1.2 Mechanical specifications

The LD8 is sealed to the IPX7, IP6X & IP67 specifications.

Equipment complies with EN60945 Protected Equipment - 4th Edition.

5.1.3 Compass safe distance

Conforms to IEC 60945.

5.1.4 Enviromental specifications

Operating temperature range:	-40°C to +75°C
Storage temperature range:	-40°C to +85°C
Maximum relative humidity:	95% non-condensing





5.1.5 Safety considerations

Though the test conditions for the LD8 unit provide for a maximum operating temperature of +75 $^{\circ}$ C, continuous operation of all electronic components should, if possible, take place at ambient temperatures of only +25 $^{\circ}$ C.

/eripos 🔶

5.1.6 Electrical specifications

Voltage:	+9 to +36 VDC
Power consumption:	3.95W typical, all constellations, all frequencies, plus L-band

NOTE

These are typical values using serial ports without interference mitigation. These values can change with the number of satellites in view, firmware version, data logging rates and features in use. Use them as a guide for what you might expect, but not as absolute values

Inrush current:

1.5 A for less than 1.3 ms (@ 12 V; typical)



5.2 Cabling and connectors

5.2.1 Power cable

KEY	J1 pinout M12	Label on lead
	1	-VIN
	2	+VIN_A
	3	+VIN_B
	4	-VIN
PIN 4— 1.110	5	Chassis GND

5.2.2 High Density 26 Pin D-Type connector

DIN	Description		
PIN	Function	RS232	RS422
1	COM1	RTS	TX-
2	COM1	ТХ	TX+
3	COM1	RX	RX+
4	COM1	CTS	RX-
10	COM2	ТΧ	TX+
11		GND	
12	COM2		RX-
13	COM3	ΤX	
14		GND	
17		GND	
19	COM2		TX-
20	COM2	RX	RX+
21	COM3	RX	
24	PPS @ 3.3V		

The 26-way high density D-type connector pin diagram is shown below (view looking into connector):





5.2.3 I/O cable

The interfacing cable connects to the high density 26 pin D-type connector which splits to three 9 pin D-type connectors (female) and a BNC female. The three comport connectors are configured as standard RS232 9-pin connections (DCE).

/eripos 🔶







5.3 LD8 output sentences

This section outlines the structure of the following message output types:

- GGA
- GST
- ZDA
- GSA
- VTG
- GSV
- GLL
- GRS
- RMC
- HDT
- TRINAV
- Veripos UKOOA
- BESTPOS / BESTGPSPOS

5.3.1 NMEA talker IDs

The NMEA talker identifier serves to define the nature of the data being transmitted. The talker is the first two characters after the \$ sign within the NMEA sentence. As the LD8 is capable of utilising more than only the GPS constellation, the talker has a set value for each constellation. For sentences where the data relates to multiple constellations the ID '**GN**' will be found.

Not all NMEA sentences will have a variable talker ID (the GGA and ZDA will be fixed with **GP**) however all other NMEA messages will have a variable talker.

Note that the talker ID is determined by the constellation/s in use and cannot be changed to another value.

The table below shows the talker IDs and the represented constellation:

Talker ID	Constellation
GP	GPS
GL	GLONASS
GA	Galileo
BD	BeiDou
GN	Multiple Constellations





5.3.2 GGA sentence

The NMEA GGA sentence contains time and position fix related data for a GPS system. It includes basic quality information, which is limited to 'Fix Quality', 'Number of Satellites in Use', 'HDOP' and 'Age of Corrections'.

/eripos 🔶

GGA sentence structure & example

\$GPGGA,	hhmmss.ss,	ddmm.mmmm,	a,	dddmm.mmmmm,	b,	q,	XX,	p.p,	a.b,	>M,	c.d,	Μ,	х.х,	nnnn	*hh
\$GPGGA,	123519.00,	4807.03787,	N,	01131.00547,	Е,	1,	15,	0.9,	545.4,	Μ,	46.9,	Μ,	14.0,	0281	*47

GGA sentence defined

Field	Content
GGA	Global Positioning System Fix data
hhmmss.ss	UTC of position
ddmm.mmmmm	Latitude of position
а	N or S, latitude hemisphere
dddmm.mmmmm	Longitude of position
b	E or W, longitude hemisphere
q	GPS Quality indicator (0 = invalid, 1 = GPS SPS, 2 = DGNSS fix, 4 = Fixed RTK, 5 = Float RTK / PPP, 6 = Dead Reckoning), 7 = Manual Input Mode, 8 = Simulation Mode
хх	Number of satellites in use
p.p	HDOP (Horizontal dilution of precision)
a.b	Antenna altitude above/below mean-sea-level
М	Units of antenna altitude, meters
c.d	The relationship between the geoid and the WGS84 ellipsoid
М	Units of meters
x.x	Age of differential GNSS data
nnnn	Differential reference station ID, 0000 to 1023
*hh	Checksum
[CR][LF]	Sentence Terminator

The number of decimal places in the GGA message Latitude and Longitude values is configurable, see section Setting GGA precision selection via terminal for details. If making changes from five decimal places the sentence will no longer conform with NMEA v3.01.





5.3.3 GST sentence

The NMEA GST sentence provides error statistics of the position fix. These statistics follow from the position calculation process.

veripos 🔶

GST sentence structure & example

\$GNGST, hhmmss.ss, a.aa, b.bb, c.cc, d.dddd, e.ee, f.ff, g.gg *hh \$GNGST, 024603.00, 1.47, 0.11, 0.07, 28.3688, 0.10, 0.08, 0.16 *58

GST sentence defined

Field	Content
GST	Estimated error in position solution
hhmmss.ss	UTC time in hours, minutes, seconds of the GPS position
a.aa	RMS value of the standard deviation of the range inputs to the navigation process. Range inputs include pseudo-ranges and differential DGNSS corrections
b.bb	Standard deviation of semi-major axis of error ellipse (meters)
C.CC	Standard deviation of semi-minor axis of error ellipse (meters)
d.dddd	Orientation of semi-major axis of error ellipse (meters)
e.ee	Standard deviation of latitude error (meters)
f.ff	Standard deviation of longitude error (meters)
g.gg	Standard deviation of altitude error (meters)
*hh	Checksum
[CR][LF]	Sentence terminator





5.3.4 ZDA sentence

The NMEA ZDA sentence provides time and time zone information.

ZDA sentence structure & example

\$GPZDA, hhmmss.ss, dd, mm, yyyy, null, null *hh \$GPZDA, 201530.00, 04, 07, 2019, , , *6E

ZDA sentence defined

Field	Content
ZDA	Time and Date data
hhmmss.ss	UTC time in hours, minutes, seconds of the GPS position
dd	Day, 01 to 31
mm	Month, 01 to 12
уууу	Year
null	Local zone hours (not available)
null	Local zone minutes (not available)
*hh	Checksum





5.3.5 GSA sentence

The NMEA GSA sentence provides time and time zone information.

GSA sentence structure & example

veripos 🔶

GSA sentence defined

Field	Content							
GSA	GNSS DOP and Active Satellites							
а	Mode (M = Manual mode, forced to operate in 2D or 3D mode, A = Automatic mode, allowed to automatically switch 2D/3D)							
b	Fix (1 = Not available, 2 = 2D, 3 = 3D)							
	PRN ID numbers of satellites used in solution a total of 12 fields							
	GPS = 1 to 32							
сс	GLONASS = 65 to 96 As shown in the above example, if less than 12 satellites for one constellation are used null values will be output in the string.							
d.d	PDOP							
e.e	HDOP							
f.f	VDOP							
hh	Checksum							





5.3.6 VTG sentence

The NMEA VTG sentence provides the actual course and speed relative to the ground.

VTG sentence structure & example

\$GNVTG, ppp.ppp, T, qqq.qgg, M, rr.rrr, N, ss.sss, K, U, *hh \$GNVTG, 167.608, T, 167.608, M, 0.006, N, 0.012, K, D, *3D

VTG sentence defined

Field	Content						
VTG	Course over ground and ground speed						
ppp.ppp	True course over ground						
т	Degrees True indicator						
qqq.qgg	Magnetic course over ground						
Μ	Degrees Magnetic						
rr.rrr	Speed over ground, knots						
N	Nautical speed indicatior (N = Knots)						
SS.SSS	Speed over ground, kilometres/hour						
К	Speed indicator (K = km/hr)						
11	Positioning mode indicator (A = Autonomous, D = Differential,						
0	E = Estimated (Dead reckoning), M = Manual, N = Data not valid)						
*hh	Checksum						





5.3.7 GSV sentence

The NMEA GSV sentence provides information relating to the number of satellites (SV) in view, satellite ID numbers, elevation, azimuth, and SNR value in one sentence.

veripos 🔶

GSV sentence structure & example

\$GPGSV, a, b, cc, dd, ee, fff, gg, dd, ee, fff, gg, dd, ee, fff, gg, dd, ee, fff, gg, *hh, \$GPGSV, 4, 1, 13, 02, 10, 043, 41, 05, 05, 103, 38, 10, 04, 238, 42, 12, 13, 030, 44, *7E, (Satellite 1) (Satellite 2) (Satellite 3) (Satellite 4)

GSV sentence defined

Field	Content
GSV	GNSS Satellites in view
а	Total number of sentences (1-9)
b	Sentence number (1-9)
сс	Total number of satellites in view, within the talker ID constellation
	Satellite ID number
dd	GPS = 1 to 32
	GLONASS = 65 to 96
ee	Elevation, degrees (90° maximum)
fff	Azimuth, degrees true, 000 to 359
gg	SNR (C/No) 00-99 dB-Hz, null when not tracking
hh	Checksum



NOTE

Fields dd, ee, fff and gg will be repeated a maximum of 4 times per sentence, where all satellite info is already output null values will be output.



5.3.8 GLL sentence

The NMEA GGL sentence provides Latitude and Longitude position data for the present position.

veripos🔶

GLL sentence structure & example

\$GNGLL,	ddmm.mmmmmm,	a,	dddmm.mmmmmm,	b,	hhmmss.ss,	S,	I	*hh
\$GNGLL,	5708.7104685,	N,	00217.1169613,	W,	062859.00,	Α,	D	*72

GLL sentence defined

Field	Content
GLL	Geographic position - Latitude and Longitude
ddmm.mmmmmmm	Latitude of position
а	Latitude direction (N or S)
dddmm.mmmmmmm	Longitude of position
b	Longitude direction (E or W)
hhmmss.ss	UTC time of position
S	Status (A = data valid ; V = data not valid)
1	Positioning mode indicator (A = Autonomous, D = Differential,
	E = Estimated (Dead reckoning), M = Manual, N = Data not valid)
*hh	Checksum





5.3.9 GRS sentence

The NMEA GRS sentence provides range residuals for each satellite.

GRS sentence structure & example

veripos 🔶

GRS sentence defined

Field	Content
GRS	GNSS range residuals
hhmmss.ss	UTC time of position
а	Mode (0 = Residuals were used to calculate the position given in the matching GGA or GNS sentence 1 = Residuals were recomputed after the GGA or GNS position was computed)
b.b	Range residuals for satellites used in the navigation solution. Order matches order of PRN numbers in GPGSA.
сс	GNSS System ID (see tables below for further explanation).
dd	Ranging Signal ID (see tables below for further explanation).
*hh	Checksum

	GNSS Constellation: GPS								
GNSS System ID:	1 (GP)								
Signal Channel:	All Signals	L1 C/A	L1 P(Y)	L2 P(Y)	L2C-M	L2C-L			
Ranging Signal ID:	0	1	2	3	4	5			

	GNSS Constellation: GLONASS									
GNSS System ID:	2 (GL)									
Signal Channel:	All Signals	L1 C/A	L1 P	L2 C/A	L2 P					
Ranging Signal ID:	0	1	2	3	4					

	GNSS Constellation: Galileo								
GNSS System ID:		3 (GA)							
Signal Channel:	All Signals	E5a	E6-BC						
Ranging Signal ID:	0	1	2	3	4	5			

	GNSS Constellation: BeiDou								
GNSS System ID:				4	(BD)				
Signal Channel:	All Signals	B1I	B1C	B1A	B2-a	B2-b	B3I	B3Q	B3A
Ranging Signal ID:	0	1	3	4	5	6	8	9	А



5.3 LD8 output sentences

		GNSS Constellation: QZSS								
GNSS System ID:			5 (0	GQ)						
Signal Channel:	All Signals	L1 C/A	L1C (D)	L1C (P)	L2C-M	L2C-L				
Ranging Signal ID:	0	1	2	3	5	6				





5.3.10 RMC sentence

The NMEA RMC sentence provides essential GPS PVT (position, velocity, time) data.

RMC sentence structure & example

\$GNRMC,	hhmmss.ss,	a,	ddmm.mmmmmmm,	b,	dddmm.mmmmmm,	с,	dd.ddd,	eee.e,	ddmmyy	f.f,	g,	h	*hh
\$GNRMC,	143909,	А,	5107.0020216,	N,	11402.3294835,	W,	0.036,	348.3,	210307,	0.0,	Е,	D	*31

RMC sentence defined

Field	Content
RMC	Recommended Minimum Sentence C
hhmmss.ss	UTC time of position
а	Position status (A = Active V = Void)
ddmm.mmmmmmm	Latitude of position
b	Latitude direction (N or S)
dddmm.mmmmmmm	Longitude of position
с	Longitude direction (E or W)
dd.ddd	Speed over the ground, knots
eee.e	Course over ground, degrees True
ddmmyy	Current date
fff.f	Magnetic variation, degrees
	Magnetic variation direction E/W
g	Easterly variation (E) subtracts from True course.
	Westerly variation (W) add to True course.
h	Mode indicator (A = Autonomous, D = Differential, E = Estimated (dead reckoning), M = Manual input, N = Data not valid)
*hh	Checksum





5.3.11 HDT sentences

The NMEA HDT sentence provides heading information derived from the receiver.

HDT sentence structure & example

\$GNHDT, dd.dddd, T hh \$GNHDT, 75.5664, T *36

HDT sentence defined

Field	Content
HDT	Heading (true) message
dd.dddd	Heading in degrees
т	Degrees True
*hh	Checksum





5.3.12 TRINAV sentences (V3 & V4)

TRINAV version 3 sentence example

[WGPOS,3,1,OEM7VERI,APEX5,OM7MR0702AN0006,1041,392609.00,0.0,57 12.08207N,002 11.53782W,114.421,0.7,1.2,,0.005948,0.000899,0.004640,0.030111,0.14,3,1,3,16,0,1,8,10,11,14,20,2 2,27,28,32,65,66,67,73,81,82,]

TRINAV version 3 sentence defined

Field	Content	Unit	Notes
Start character	A6	[-]	\$WGPOS
Format version	I	[-]	= 3 for this version
Nav. point no.	I	[-]	See comment 1
System name/version	А	[-]	Name + version of DGPS system. See comment 2
GPS week number	I	[-]	GPS week no. since April 6 2019
GPS time of fix	F10.2	[s]	Seconds into GPS week (GPS time).
Age of fix	F4.1	[s]	See comment 3
Latitude	A13	[dm]	dd mm.mmmmmN, space between D and M
Longitude	A14	[dm]	dd mm.mmmmmE, space between D and M
Height	F7.3	[m]	Antenna height above ellipsoid. See comment 4
HDOP	F5.1	[-]	Horizontal dilution of position
VDOP	F5.1	[-]	Vertical dilution of position
Unit variance	F9.3	[m2]	See comment 5
Variance latitude	F10.6	[m2]	See comment 5
Covariance lat/long	F10.6	[m2]	See comment 5
Variance longitude	F10.6	[m2]	See comment 5
Variance height	F10.6	[m2]	See comment 5
External reliability	F7.2	[m]	See comment 6
Fix status	I	[-]	See comment 7
Computation type	I	[-]	See comment 8
Correction type	I	[-]	See comment 9
No. of satellites (n)	I	[-]	No. of satellites used for this fix
No. of ref. stations (r)	I	[-]	No. of ref. stations used for fix. See comment 10
PRN's of sats. used	l*n	[-]	Satellites used for this fix. Separated by commas
Ref. station idents	l*n	[-]	Ref. stations used for this fix. Separated by commas
End character	A1	[-]	Close string
CRLF	A2		





TRINAV version 3 definitions commentary

1. The "Nav point no." is a unique integer identifying the position. It should be manually entered into the software according to requests from Positioning Engineers. Alternatively, this should start from 1 and be incremented if several positions are output from the same system.

eripos

- 2. The system name should identify the system (or contractor) and software version (e.g. "SEADIFF 2.1" or "MFIX 1.2.3").
- 3. The "Age of fix" is the time of the first character of the data string being output to WesternGeco's positioning system minus the time of position.
- 4. WGS84 ellipsoid and datum must be used. The height must be antenna height above the WGS84 ellipsoid.
- 5. The variance and covariance terms are elements from the variance-covariance matrix of the position fix computation (un-scaled).
- 6. The external reliability is the maximum positional effect of an undetectable error in an observation. This quantity is related to the power of the test (the probability that the MDE would be detected) and the significance level used.
 - 1. The values recommended by UKOOA should be used (see UKOOA Guidelines for the use of Differential GPS in offshore surveying, Issue no. 1, Sept. 1994) i.e. a significance level of test 1% and the power of the test 80%.
 - 2. If values other than those given above are used, this must be explicitly stated by the contractor.
- 7. TRINAV V3 fix status codes:

Status code	Meaning
0	No or bad fix
1	Altitude aiding (Weighted height used in fix)
2	Altitude hold (2D fix)
3	3D fix
4	3D fix INS aided
5	INS only (dead reckoning)

8. TRINAV V3 computation type codes

Type code	Meaning
0	No corrections
1	Single frequency DGNSS
2	Dual frequency DGNSS
3	PPP (satellite orbit and clock corrections)
4	PPP-AR (ambiguity resolution) using phase bias information.
5	Other

9. TRINAV V3 source codes:

Type code	Meaning
L	L-band only, always followed by 1 (i.e. L1)
М	L-band multi-channel, followed by number of links tracked (e.g. M3)
1	Internet source, always followed by 0 (i.e. I0)
0	Other, always followed by 0 (i.e. O0)

10. "No. of ref. stations" gives the number of reference stations in use for this fix, not the number of stations available. This field must be set to 0 if the fix is not differential.





TRINAV version 4 sentence example

[WGPOS,4,1,OEM7VERI,APEX5,OM7MR0702AN0006,1041,396729.00,0.0,57 12.08195N,002 11.53806W,113.340,0.7,0.9,,0.285460,0.009316,0.156003,0.663714,1.33,3,2,G,R,1,0,0,0,1,M3,IOR,2 5E,AORW,18,2,G01,G03,G08,G10,G11,G14,G17,G18,G22,G28,G32,R02,R03,R09,R11,R17,R18,R19 ,777,706,]

TRINAV version 4 sentence defined

Field	Content	Unit	Notes
Start character	A6	[-]	\$WGPOS
Format version	I	[-]	= 4 for this version
Nav. point no.	I	[-]	See comment 2
System	А	[-]	Application name and version, space separated e.g. Quantum 3.0.0.0
Service level	А	[-]	Highest enabled service permitted e.g. APEX Pro
Version	А	[-]	Firmware version as reported by the GNSS card e.g. OEM060700SN0062
GPS week number	I	[-]	GPS week no. since April 6 2019
GPS time of fix	F10.2	[s]	Seconds into GPS week (GPS Time).
Age of fix	F4.1	[s]	This field indicates the age of the solution as reported by the GNSS card, based on the time between receiving measurements and generating output.
Latitude	A13	[dm]	dd mm.mmmmmN, space between D and M
Longitude	A14	[dm]	ddd mm.mmmmmE, space between D and M
Height	F7.3	[m]	Antenna height above ellipsoid. See comment 3
HDOP	F5.1	[-]	Horizontal dilution of position
VDOP	F5.1	[-]	Vertical dilution of position
Unit variance	F9.3	[m2]	See comment 4
Variance latitude	F10.6	[m2]	See comment 4
Covariance lat/long	F10.6	[m2]	See comment 4
Variance longitude	F10.6	[m2]	See comment 4
Variance height	F10.6	[m2]	See comment 4
External reliability	F7.2	[m]	See comment 5
Fix status	I	[-]	See comment 6
Constellations in fix (c)	I	[-]	Number of constellations used in the computation
Identifiers of constellations	A*c	[-]	Constellation character based on RINEX format (G-GPS, R-GLONASS, E-Galileo, C-BeiDou, J-QZSS)
GNSS frequency	I	[-]	Number of GNSS frequencies used in the computation (i.e. single frequency, dual frequency, triple frequency)


Field	Content	Unit	Notes
PPP-AR	I	[-]	Phases biases used or not to perform ambiguity resolution. Value of 1 indicates a PPP-AR solution, 0 it is not.
Atmospheric corrections	I	[-]	Use of external atmospheric corrections in computation Value of 1 shows it has atmospheric correction applied, 0 it hasn't.
GNSS integrity/Authentication message	I	[-]	External information used as an integrity check on GNSS broadcast data. Value of 1 shows it has been used, 0 it hasn't.
Correction type	I	[-]	See comment 7
Correction source(s)	A2	[-]	See comment 8
Names of correction links	A*s	[-]	Link names providing corrections. Separated by commas
No. of SV's (n)	I	[-]	No. of GNSS satellites used for this fix
No. of ref. stations (r)	I	[-]	No. of ref. stations used for fix. Set to 0 for non-differential solutions
PRN's of SV's used	A*n	[-]	GNSS satellites used for this fix in RINEX format (G-GPS, R-GLONASS, E-Galileo, C-BeiDou, J-QZSS). Separated by commas (e.g. G01,R03)
Ref. station ID	l*r	[-]	Reference stations used for this fix. Separated by commas. Field(s) will not appear for non-differential solutions.
End character	A1	[-]] (Close string)
CRLF	A2		

TRINAV version 4 definitions commentary

- 1. CSV formatting is provided as a guide and it is possible and expected that greater resolution will be output if required.
- 2. The "Nav point no." is a unique integer identifying the position. It should be manually entered into the software according to requests from Positioning Engineers. Alternatively, this should start from 1 and be incremented if several positions are output from the same system.
- 3. WGS84 ellipsoid and datum must be used. Must be antenna height above the WGS84 ellipsoid.
- 4. The variance and covariance terms are elements from the variance-covariance matrix of the position fix computation (un-scaled).
 - 1. Unit variance currently unavailable and will be a NULL field for the moment.
- 5. The external reliability is the maximum positional effect of an undetectable error in an observation. This quantity is related to the power of the test (the probability that the MDE would be detected) and the significance level used.
 - 1. The values recommended by IMCA/OGP should be used (see IMCA/OGP Guidelines for GNSS positioning in the oil & gas industry Report No. 373-19 or IMCA S015, June 2011) i.e. a Significance level of test 1% and the Power of the test 80%.
 - 2. If values other than those given above are used, this must be explicitly stated by the contractor.





3. Veripos statistics are implemented as per the IMCA/OGP 'Guidelines for GNSS positioning in the oil & gas industry' Report No. 373-19 or IMCA S015, June 2011, unless otherwise indicated.

veripos 🔶

6. TRINAV V4 fix status codes:

Status code	Meaning
0	No or bad fix
1	Altitude aiding (weighted height used in fix)
2	Altitude hold (2D fix)
3	3D fix
4	3D fix INS aided
5	INS only (dead reckoning)

1. TRINAV V4 computation type codes:

Type code	Meaning
0	No corrections
1	Single frequency DGNSS
2	Dual frequency DGNSS
3	PPP (satellite orbit and clock corrections)
4	PPP-AR (ambiguity resolution) using phase bias information.
5	Other

2. TRINAV V4 correction source codes:

Type code	Meaning
L	L-band only, always followed by 1 (i.e. L1)
М	L-band multi-channel, followed by number of links tracked (e.g. M3)
1	Internet source, always followed by 0 (i.e. I0)
0	Other, always followed by 0 (i.e. O0)





5.3.13 Veripos UKOOA sentence

The Veripos UKOOA sentence is compliant with **OGP 373-19** and **IMCA S015 (July 2011)**. For further information relating to these standards please visit https://www.iogp.org and https://www.imca-int.com.

Veripos UKOOA sentence structure & example

[240 7300 VERI 1 2067 295238.0 +0.1 +8.0 057 12.08207N 002 11.53776W 63.997 +50.40 1.151 0.564 1.004 7 0.025 0.054 0.14 0.001 0.000 0.000 0.003 0.06 0.05 6.5 P 15{ 20 27 13 30 26 8 21 16 7 10 15 85 77 75 86} 1{ 481}]

Veripos UKOOA sentence defined

Field	Content	Notes
Field	Content	Notes
1	Start Character	Open string
25	Length of Message	Number of characters
610	Software Version	
1116	System Name	
1718	Record Identifier	Shows the calculation used, as different calculations can be labelled: 1, 2, 3 etc
1923	GPS Week Number	Since Jan 6 th 1980
2432	GPS Time of Fix	Seconds into current GPS Week
3337	Age of Record	Time (in seconds) of the first character of the data string being output, minus the time of position.
3843	Latency	Latency in seconds
4456	Latitude	Latitude displayed with spaces, dd mm.mmmmm'
57	Latitude Hemisphere Indicator	N or S
5871	Longitude	Longitude displayed with spaces, dddmm.mmmmm'
72	Longitude Hemisphere Indicator	E or W
7379	Altitude above MSL	Antenna height (in metres) above mean sea level (datum for height calculations)
8087	Geoid Separation	Separation between mean sea level and the WGS84 reference ellipsoid (in metres), based on a Geoid model as for example EGM96.
8894	PDOP	
95101	HDOP	





Field	Content	Notes
102108	VDOP	
109110	Fix Status	Single Frequency
0 = None or Bad Fixes	4 = None or Bad Fixes	0 = None or Bad Fixes
1 = Altitude Aiding (weighted height)	5 = Altitude Aiding (weighted height)	1 = Altitude Aiding (weighted height)
2 = Altitude hold (2D Fix)	6 = Altitude hold (2D Fix)	2 = Altitude hold (2D Fix)
3 = 3D Fix	7 = 3D Fix	3 = 3D Fix
111117	Internal Reliability	Smallest outlier (in metres) that is likely to be detected by the current solution.
118125	External Reliability	Maximum positional effect (in metres) of an undetectable error in an observation. This quantity is related to the Power of the test (probability that the MDE would be detected) and the Significance level used.
126130	Unit Variance	The Variance and Covariance terms are elements from the variance- covariance matrix of the position fix computation (un-scaled) in metres ² .
131137	Variance Latitude	
138145	Covariance Lat/Long	
146152	Variance Longitude	
153159	Variance Height	
160165	95% Error Ellipse Semi Major Axis	Shows 95% confidence level of the semi-major axis of the error ellipse in metres.
166171	95% Error Ellipse Semi Minor Axis	Shows 95% confidence level of the semi-minor axis of the error ellipse in metres.
172177	Semi Major Axis of Error	Orientation of the semi major axis (degrees from true North)
178179	F Test	A test applied to the Unit Variance. (P=Pass, F=Fail). A "Fail" may result from large outliers in the measurements.
180182	No of Satellites	





Field	Content	Notes
	used in the Fix (n)	
Variable	Satellite PRN Numbers of Satellites used in Fix	PRN numbers are space separated
Variable	Number of Reference Stations used for this Fix (00 – 99)	
Variable	lds of the Reference Stations used in the Fix	Station ID numbers are space separated
	End of Character	Close string
	Carriage Return	
	Line Feed	



5.3.14 BESTPOS / BESTGPSPOS sentences

BESTPOS / BESTGPSPOS sentences contain time and position fix-related data for a GPS system and include basic quality information, limited to 'Fix Quality', 'Number of Satellites in Use', 'HDOP' and 'Age of Corrections'.

BESTPOS / BESTGPSPOS sentences structure & example

#BESTPOSA,USB1,0,58.5,FINESTEERING,2209,502061.000,02000020,cdba,16809;SOL_ COMPUTED,PPP,51.15043706870,-114.03067882331,1097.3462,-17.0001,WGS84,0.0154,0.0139,0.0288,"TSTR",11.000,0.000,43,39,39,38,00,00,7f,37*52483ac5

veripos 🔶

BESTPOS / BESTGPSPOS sentences defined

Field	Content
1. Log header	BESTPOS header
2. sol stat	Solution status
3. pos type	Position type
4. lat	Latitude (degrees)
5. lon	Longitude (degrees)
6. hgt	Height above mean sea level (metres)
7. undulation	Undulation - the relationship between the geoid and the ellipsoid (m) of the chosen datum $% \left({{\left[{{m_{\rm s}} \right]} \right]_{\rm source}} \right)$
8. datum id#	Datum ID number 61 = WGS84 63 = USER
9. lat σ	Latitude standard deviation (m)
10. lon σ	Longitude standard deviation (m)
11. hgt σ	Height standard deviation (m)
12. stn id	Base station ID
13. diff_age	Differential age in seconds
14. sol_age	Solution age in seconds
15. #SVs	Number of satellites tracked
16. #solnSVs	Number of satellites used in solution
17. #solnL1SVs	Number of satellites with L1/E1/B1 signals used in solution
18. #solnMultiSVs	Number of satellites with multi-frequency signals used in solution
19. Reserved	
20.ext sol stat	Extended solution status
21. Galileo and BeiDou sig mask	Galileo and BeiDou signals used mask
22. GPS and GLONASS sig mask	GPS and GLONASS signals used mask





5.3 LD8 output sentences

Field	Content
23. xxxx	32-bit CRC (ASCII and Binary only)
24. [CR][LF]	Sentence terminator (ASCII only)





6 Contact information

All initial contacts regarding technical or support issues should be initially addressed to Veripos Support. Where appropriate Support will refer issues to the regional operations and engineering teams.

6.1 Veripos Support details

Veripos Support website Veripos Support telephone Veripos Support e-mail

https://veripos.com/support +44 1224 965900 support.veripos@hexagon.com





7 Appendix

7.1 Summary specification of antennas

7.1.1 Veripos V560 combined GNSS & L-band antenna

L-band/GPS/GLONASS:	1525-1610 MHz
GPS L2/GLONASS L2:	1160-1252 MHz
(complete with a narrow band fil	ter for interference rejection)
LNA Gain:	45db
DC Voltage input:	3.0 to 15.0V
RF Input Connector:	TNC female (note cable RF connector – TNC male)
Material:	Weather Proof Polymer Plastic
Mount:	5/8" Tripod Tread Connector
Temperature Range:	-55 to +85°C
Certification:	IEC 60945
Diameter:	7.5" / 19.05cm
Height:	3.17" / 8.05cm
Weight:	1.6lbs / 0.73kg

7.1.2 V560 phase centre offsets

The diagram on the left shows the antenna reference position (ARP) vertical offset from the GNSS L1 and L2 frequencies phase centres, and the diagram on the right shows ARP at the antenna base and the antenna North alignment reference:



V560 phase centre values above ARP



V560 ARP & North alignment reference



The table below details the North, East and Up phase centre values for GNSS L1 and L2 frequencies:

	Relative to Antenna Reference Point (ARP)			
GNSS Frequency	North (mm) East (mm) Up (mm)			
L1	-0.34	-0.53	58.24	
L2	0.11	-0.76	68.35	

7.2 Summary specification of cabling

With the system Veripos typically provide pre-terminated cables and tails for use with both L-band and GNSS antennas (see the *Delivery note*). Veripos recommend use of Times Microwave coaxial LMR cable for installation of all antennas.

7.2.1 Times LMR-400 coaxial cable

7.2.1.1 Electrical specifications

Performance property	Units	US	(metric)
Attenuation @1.5GHz:			
30.77m (100ft.)	5.1dB		
100m	16.8dB		
Velocity of propagation	%	85	
Dielectric constant	N/A	1.38	
Time delay	nS/ft (nS/m)	1.20	(3.92)
Impedance		50	
Capacitance	pF/ft (pF/m)	23.9	(78.4)
Inductance	uH/ft (uH/m)	0.060	(0.20)
Shielding effectiveness	dB	>90	
DC resistance			
Inner conductor	/1000 ft (/km)	1.39	(4.6)
Outer conductor	/1000 ft (/km)	1.65	(5.4)
Voltage withstand	VDC	2500	
Jacket spark	Vrms	8000	
Peak power	kW	16	



7.2 Summary specification of cabling

7.2.1.2 Mechanical specifications

Performance property	Units	US	(metric)
Bend radius, installation	in. (mm)	1.00	(25.4)
Bend radius repeated	in. (mm)	4.0	(101.6)
Bending moment	ft-lb (N-m)	0.5	(0.68)
Weight	lb/ft (kg/m)	0.068	(0.10)
Tensile strength	lb (kg)	160	(72.6)
Flat plate crush	lb/in. (kg/mm)	40	(0.71)

veripos 🔶

7.2.1.3 Environmental specifications

Performance property	°F	°C
Installation temperature range	-40 to +185	-40 to +85
Storage temperature range	-94 to +185	-70 to +85
Operating temperature range	-40 to +1851	-40 to +85

7.2.2 Times LMR-240 coaxial cable

7.2.2.1 Electrical specifications

Performance property	Units	US	(metric)
Attenuation @1.5GHz:			
30.77m (100ft.)	9.9dB		
100m	32.4dB		
Velocity of propagation	%	84	
Dielectric constant	N/A	1.42	
Time delay	nS/ft (nS/m)	1.21	(3.97)
Impedance		50	
Capacitance	pF/ft (pF/m)	24.2	(79.4)
Inductance	uH/ft (uH/m)	0.060	(0.20)
Shielding effectiveness	dB	>90	
DC resistance			
Inner conductor	/1000 ft (/km)	3.2	(10.5)
Outer conductor	/1000 ft (/km)	3.89	(12.8)
Voltage withstand	VDC	1500	
Jacket spark	Vrms	5000	
Peak power	kW	5.6	



7.2 Summary specification of cabling

7.2.2.2 Mechanical specifications

Performance property	Units	US	(metric)
Bend radius, installation	in. (mm)	0.75	(19.1)
Bend radius repeated	in. (mm)	2.5	(63.5)
Bending moment	ft-lb (N-m)	0.25	(0.34)
Weight	lb/ft (kg/m)	0.034	(0.05)
Tensile strength	lb (kg)	80	(36.3)
Flat plate crush	lb/in. (kg/mm)	20	(0.36)

veripos 🔶

7.2.2.3 Environmental specifications

Performance property	°F	°C
Installation temperature range	-40 to +185	-40 to +85
Storage temperature range	-94 to +185	-70 to +85
Operating temperature range	-40 to +185	-40 to +85



7.3 Configuration and settings log

7.3.1 Tools > Terminal

PPP Mode:	LOG I	PPPSOURCE	□ Auto			A
PPS:	LOG H	PPSCONTROL	□ Disabled □ Pulse:			
PTP:	LOG H	PTPMODE	□ Disable □ Enable:	LOG PTPTIME	ESCALE	□ UTC_TIME □ PTP_TIME
				LOG PTPPROF	FILE	 PTP_UDP PTP_UDP_PEER PTP_ETH PTP_ETH_PEER ITUT_G.8275.1_ETH

7.3.2 Configuration > Positioning

Configuration > Positioning > Next > RTK

RTK:	□ Disabled					
	□ Enabled:	Input Format:				LX 🗆 RTCA
				□ RTCMV3		5
		Input Ports:	□ COM1		12 🗆 0	COM3
Configuration > Positioning > Next > PPP						
L-band Beam:	□ Auto			□ 25E	□ 143.E	□ 98W
Configuration >	Positioning	> Next > SBA	S			
SBAS:	□ Disabled					
	□ Region:			S 🗆 GA	AGAN	□ MSAS



7.3.3 Configuration > Ports

COM1:	□ None □ Input					
	Baud:	□ 2400 □ 4800 □ 9600 □ 19200 □ 38400 □ 57600 □ 115200 □ 230400 □ 460800				
	Parity:					
	Data Bits:					
	Stop Bits:					
	Input/Output Format:	If NMEA selected: Message(s) Period				
		S S				
		S				
COM2:	□ None □ Input	Output				
	Baud:	□ 2400 □ 4800 □ 9600 □ 19200 □ 38400 □ 57600 □ 115200 □ 230400 □ 460800				
	Parity:					
	Data Bits:	□ 7 □ 8				
	Stop Bits:					
	Input/Output Format:	If NMEA selected: Message(s) Period				
		S C				

veripos 🧇



COM3:	□ None □ Input	
	Bau	d: □ 2400 □ 4800 □ 9600 □ 19200 □ 38400 □ 57600 □ 115200 □ 230400 □ 460800
	Parit	
	Data Bit	s: □7 □8
	Stop Bit	S: □ 1 □ 2
	Input/Output Forma	t: If NMEA selected: Message(s) Period

ICOM1:	□ None	🗆 Input	Output			
		Protocol:	□ Disabled		UDP	
	Input/Outp	ut Format:	H	NMEA selected:	Message(s)	Period s s s s s s s s s
ICOM2:	□ None	□ Input	Output			
		Protocol:	□ Disabled		UDP	
	Input/Outp	ut Format:	II	NMEA selected:	Message(s)	Period s

s s



7.3 Configuration and settings log

ICOM3:	□ None	🗆 Input	Output				
		Protocol:	□ Disabled □ TCP □ UDP				
	Input/Outp	ut Format:		f NMEA selected:	Message(s)	Period S S S S S S S S	
ICOM4:	□ None	□ Input	Output				
	Protocol:			d 🗆 TCP 🗆	UDP		
	Input/Outp	ut Format:	[] [f NMEA selected:	Message(s)	Period S S S S S S S S	
ICOM5:	□ None	🗆 Input	Output				
		Protocol:	Disable	d 🗆 TCP 🛛	UDP		
	Input/Outp	ut Format:	I'	f NMEA selected:	Message(s)	Period S S S S S S S	





USB1:	□ None □ Input			
	Input/Output Format:	If NMEA selected:	Message(s)	Period s s s s s s s
USB2:	□ None □ Input	Output		
	Input/Output Format:	If NMEA selected:	Message(s)	Period S S S S S S S
USB3:	□ None □ Input			
	Input/Output Format:	If NMEA selected:	Message(s)	Period S S S S S S

7.3.4 Configuration > Heading

Heading:	□ Enabled □ Disabled						
	Heading Offset (degrees):						
	Heading Output Rate(Hz):	□ 1	□ 2	□ 4	□ 5	□ 10	□ 20





7.3.5 Settings > Networking

Settings > Networking > Ethernet

DHCP:	Enabled					
	□ Disabled:	IP Address:	•	•	•	
		Subnet Mask:	•	•		
		Gateway:	•		-	

Tools > Terminal

DNS:

LOG TESTATUSA ONCE			
	LOG	IPSTATUSA	ONCE

•	•	•	



7.4 L-band coverage map

